


uDeluxe Max

OS-8210 Operation Manual

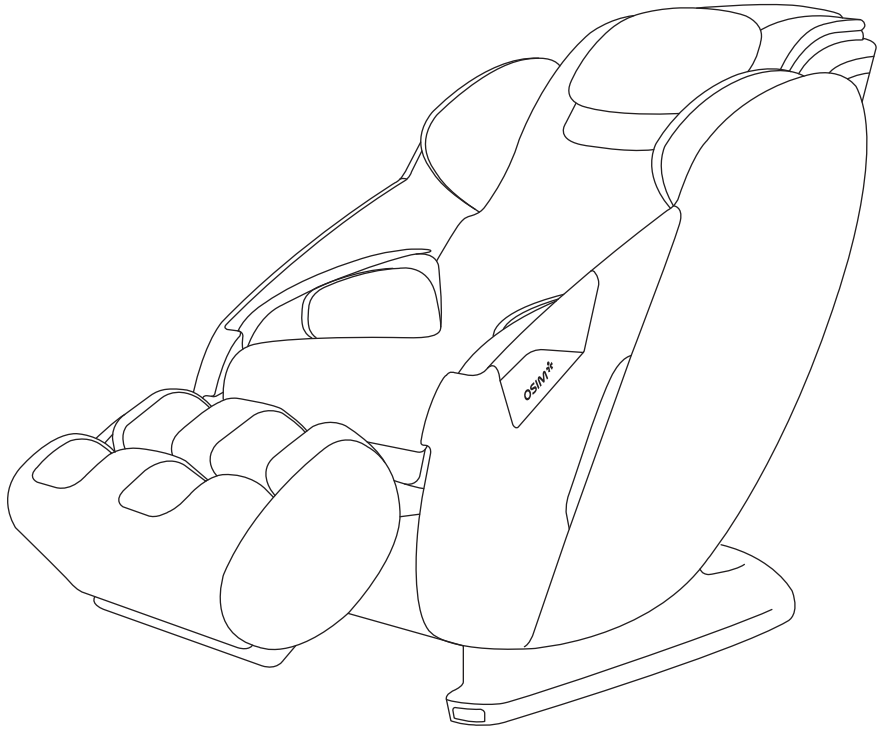

1) English

2) Simplified Chinese 简体中文

3) Traditional Chinese 繁體中文

OS-8210 uDeluxe Max

Thank you for purchasing the OSIM uDeluxe Max massage chair. Please read the operation manual thoroughly for the correct methods of usage and take special notice of the safety section before you start.

This manual should be kept on hand for easy reference. It is your guide to a safe and efficient operation.

Contents	Safety	2
	Names of parts and functions	5
	Features	7
	Preparation before use	8
	Massage programs and selections	14
	Product care and storage	19
	Troubleshooting	20
	Specifications	22

IMPORTANT SAFETY INSTRUCTIONS

When using the product, please take special notice of the following basic precautions:
Read all instructions before using this product.

DANGER – To reduce the risk of electric shock:

Always unplug this product from the electrical outlet immediately after use and before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 2) The product should never be left unattended when plugged in. Unplug from electrical outlet/power source when it is not in use, and before putting on or taking off parts.
- 3) Do not operate the product under the blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 4) Do not use the product if the electrical outlet/power source is loose.
- 5) Do not connect or disconnect the power plug/USB cable from the electrical outlet / power source with wet hands.
- 6) When disconnecting the power plug/USB cable, pull it out by holding the plug/USB cable head, not the cord/cable.
- 7) Do not operate the product if it has a damaged cord or plug/USB cable, a malfunction, a power failure, or it is dropped into the water. Injury may occur when power is restored unexpectedly. Return the product to OSIM Service Center for examination and repair.
- 8) If the power plug/USB cable or power cord is damaged, it must be replaced by OSIM Service Center or its authorized service agents.
- 9) Do not carry this product by the power cord/USB cable or use the power cord/USB cable as a handle.
- 10) Keep the product power cord/USB cable away from heated surfaces.
- 11) Do not place the power cord/USB cable under the product or any other heavy objects.
- 12) Do not wind the power cord/USB cable around the product.
- 13) Do not operate the product with the air openings blocked. Keep the air openings free of lint, hair, and the likes.
- 14) Remove power plug/USB cable from the electrical outlet /power source immediately should liquid be accidentally spilled onto the product as this may result in electric shock.
- 15) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 16) To disconnect, turn off all controls and remove the power plug/USB cable from the electrical outlet/power source.
- 17) Do not drop or insert any object or flammable material into any openings of the product. This may result in electric shock, malfunction or risk of fire.
- 18) Children should be supervised to ensure that they do not play with the product.

- 19) This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Keep children away when the product is in operation.
- 20) Cleaning and user maintenance of the product shall not be made by children.
- 21) Do not use or operate the product when your body or hands are wet.
- 22) Do not use this product outdoors.
- 23) Do not use the product in an excessively humid or dusty environment as it may result in malfunction.
- 24) Do not use the product in temperatures higher than 40°C.
- 25) Do not expose the product to heaters, stoves or direct sunlight.
- 26) Do not cover the product during operation. This may result in a rise in motor temperature and subsequent malfunction or fire.
- 27) Do not use the product in the event of a lightning storm.
- 28) If you should use the product in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- 29) If the product is brought into a warm environment from a cold place where it was stored, wait for an hour before use as there may be water droplets on mechanical parts due to condensation. Using the product under such condition may result in malfunction.
- 30) When first using the product, please be careful and test it out using a low intensity/or use within a short period of time to understand how the different motors work and your preferred intensity.
- 31) Be sure to start on the gentle massage program if using the product for the first time.
- 32) If your legs slip off the footrest during massage, do not force them back in when the kneading discs are clamped as this may result in injury.
- 33) Do not stand on or in product. Use only while seated.
- 34) Place and use the product on an even, non-slip floor.
- 35) Do not use the product if the fabric of the footrest is torn and the internal components are exposed.
- 36) Do not disassemble the fabric cover of the product. Touching the internal components of the product may result in malfunction or an electric shock.
- 37) Do not dismantle, drop, or subject the product to shock or vibration.
- 38) Do not use the product in combination with other therapeutic equipment or electric blanket, etc, as this may result in ineffectiveness or injury.
- 39) Do not rest or place heavy objects on the product as this may result in malfunction.
- 40) The product must only be serviced or repaired by the OSIM Service Center. Users must not attempt to disassemble or repair the product.
- 41) Some noise may be heard coming from the product while in use. This is due to the structure of the product and is normal.
- 42) Please do not use the product if you are not feeling well or under the influence of alcohol.

- 43) Stop using immediately should you experience discomfort and consult your doctor if you experience any abnormal or severe pain.
- 44) The product has a heated surface. People who are insensitive to heat must be careful when using the product.
- 45) This product is not intended for self-diagnosis or self-treatment of conditions that should be managed by a qualified health care provider.
- 46) If you are under any medication or fall into any of the following categories (but not limited to), please consult your health care provider first before use:
 - Heart diseases
 - High, or low blood pressure, deep vein thrombosis (DVT)
 - Pregnant
 - Diabetes
 - Individuals fitted with medical implants e.g. pacemaker, automatic implantable cardioverter defibrillator (AICD)
 - Recently underwent surgical operations
 - Those with any bone conditions like fractures, osteoporosis
- 47) Each auto massage program is designed to last 15-30 minutes for optimal effectiveness. Ensure that the product rests for 10 minutes before it is being used again as continuous usage over a long period may activate the overheat protection device.
- 48) For best results, enjoy your massage regularly, while keeping in mind that moderation is key to avoid excessive stimulation and ensure a balanced experience.
- 49) Do not use the product when the upholstery or seat is removed. This may cause injury or malfunction.
- 50) Do not exert excessive force on the back of your neck while using massager.
- 51) Do not insert your hand or foot along the paths of the massage rollers during usage as this may cause injury.


SAVE THESE INSTRUCTIONS

This product is intended for household use only

Warranty is subjected to cancellation if the product is used for commercial purposes.

Names of parts and functions

Massage chair

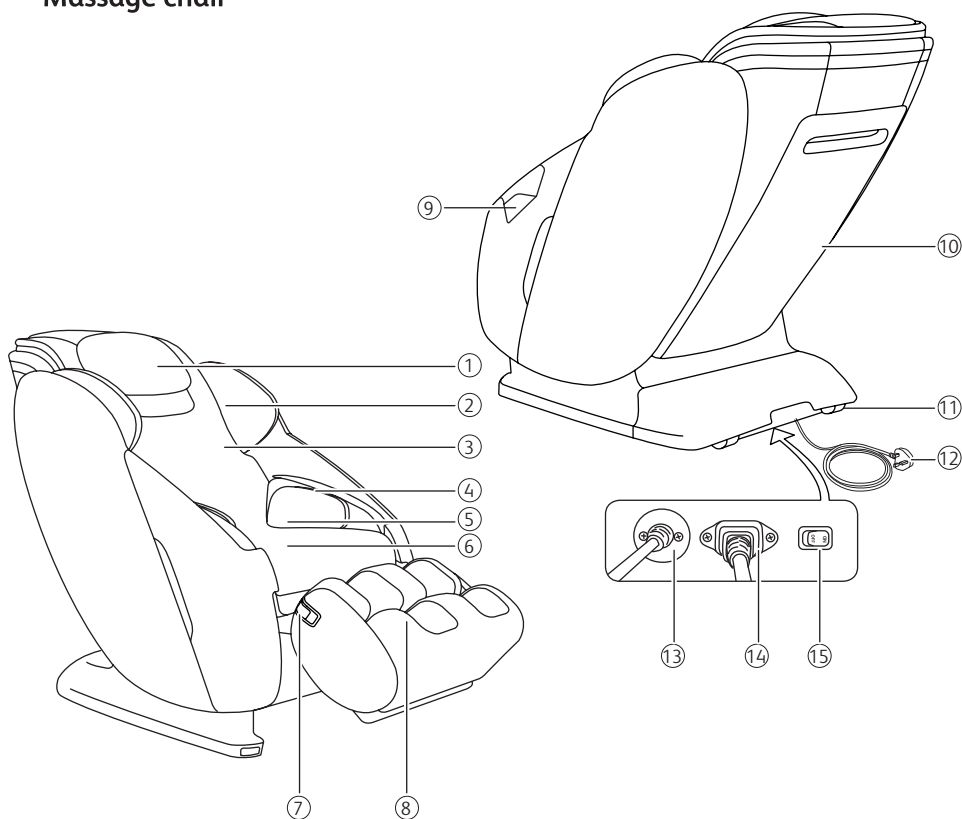

*Product images are for illustrative purposes only and are not drawn to scale.

- | | |
|-------------------------------|--------------------------------|
| 1. Headrest pad | 9. Controller Pocket |
| 2. Upper arm massage unit | 10. Backrest casing |
| 3. Backrest pad | 11. Casters |
| 4. Lower arm massage unit | 12. Power cord and power plug* |
| 5. Hips airbag massage unit | 13. Controller inlet |
| 6. Seat | 14. Power inlet |
| 7. Locking lever for footrest | 15. Main power switch |
| 8. Footrest massage unit | |

*Power plug and main power switch will vary according to country.

Names of parts and functions

Controller

Reset button

To stop massage program. Rollers will return to its default position.

Auto massage program button

Refer to page 14 for details.

Airbag massage button

To active both arm and shoulder airbags.

3D roller adjustment buttons

To adjust 3D roller protrusion level during massage. Refer to page 17 for details.

Footrest adjustment buttons

To raise or lower the footrest to desired height/length.

Manual massage program button

Refer to page 15 for details.

Roller width adjustment button

To adjust width of rollers (Wide, Mid, Narrow).

Full/Partial rolling massage button

To select full or partial rolling for your back.

Standby LED indicator

LED lights up when in Standby mode. Refer to page 7 for details.

Safety stop button

To stop chair operation immediately.

Warm air button

To activate warm air during massage.

Hip airbag massage

To activate hip airbag massage.

Backrest adjustment buttons

To raise or recline the backrest to desired angle.

Upright button

Return backrest/footrest to default upright position.

Legs massage button

To activate calf and/or foot massage.

Shoulder position adjustment button


Refer to page 17 for details.

Roller Position buttons

To adjust roller position during manual massage.

Tapping speed adjustment button

To adjust tapping speed during manual massage (Hi, Lo).

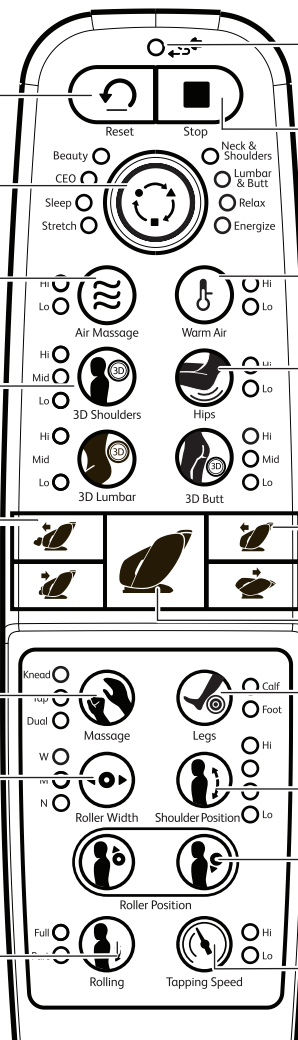

Caution

- Do not sit, step or place heavy objects on the controller.
- Refrain from dropping the controller. It is recommended that the controller be placed in the controller pocket when not in use.
- Do not exert excessive force on the controller.
- Do not operate the controller with wet hands.
- Do not operate the controller using sharp-edged or hard objects. It may result in damage.

Features

Full-body massage

- Intelligent and precise full-body massage with 3D 6-roller system, airbags and kneading discs
- Auto shoulder detection function for a more personalized massage
- Adjustable airbag massage intensity for hips, upper and lower arms (High, Low)
- Adjustable 3D roller protrusion level
 - Shoulders (5 positions)
 - Lumbar (5 positions)
 - Butt (3 positions)
- Adjustable roller width (Wide, Mid, Narrow)
- Adjustable roller position during manual massage programs
- Wrap-around power squeeze massage for calves and feet

Auto and manual massage programs

- 8 Auto massage programs
 - Neck & Shoulders, Lumbar & Butt, Relax, Energize, Stretch, Sleep, CEO and Beauty
- Customizable manual massage
 - Kneading, Tapping, Dual and Rolling (Full, Partial) massage
 - Upper Arms, Lower Arms and Hips airbag massage
 - Calf and foot power squeeze massage

Massage chair positioning

- Retractable footrest to give you more living space
- Ottoman position of footrest for greater versatility
- Footrest and backrest can return to default upright position with just one touch activation on the controller

Others features

- 15 minutes auto timer
- Easy to use controller with LED indicators for selecting and customizing massage programs
- Built-in casters for easy maneuvering


Explaining the Standby LED

- When the Standby LED indicator turns on, it means the product has entered standby mode, during this period the product power consumption will be less than 0.8W. The icon [] is to remind users that for optimal safety and energy conservation, please remember to unplug the electrical power plug when not in use.


Preparation before use

Setting up the uDeluxe Max

- The uDeluxe Max is packaged with its backrest in its reclined position.
- Before use, ensure that the backrest is raised fully to its upright position, as shown.

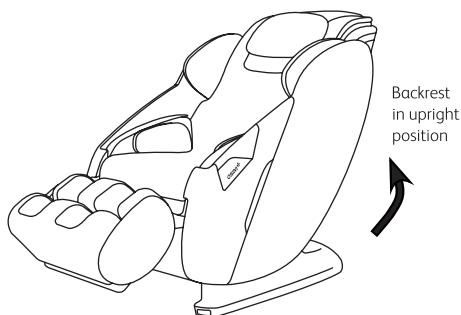

- Align the zipper on the headrest pad as shown and secure it.

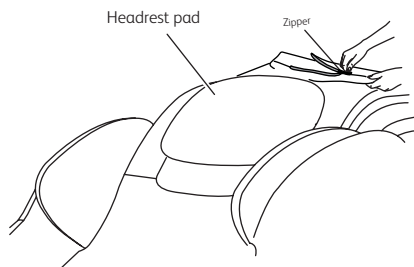


Caution

- Do not remove the backrest pad.

Placing the headrest pad


- Insert the loose end of the headrest pad under the strap and flip over the headrest pad as shown.

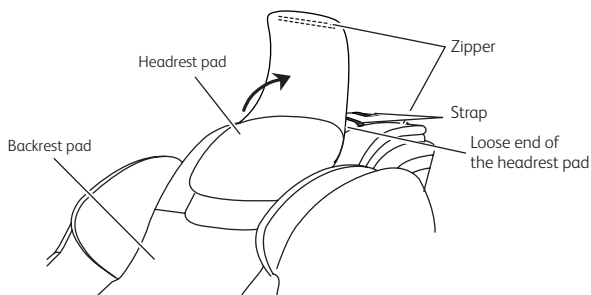

Preparation before use

Placing the uDeluxe Max


- Ensure that there is a minimum clearance of 70 cm behind and 80 cm in front of the uDeluxe Max (as shown) to allow the backrest to recline and extend the footrest without obstruction during operation.
- Maintain a minimum distance of 1 meter from AV devices such as television sets or radio to prevent signal interference.

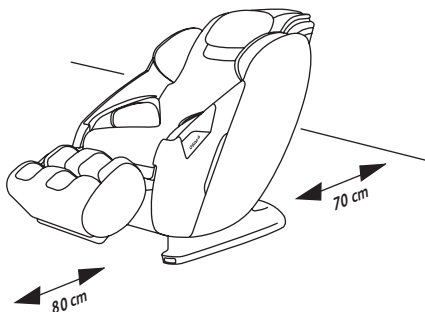

- As the uDeluxe Max is heavy, please exercise extra care to not damage floor surfaces when positioning it.
- It is recommended that a carpet be placed under the uDeluxe Max to prevent scratches on the floor and reduce noise level during operation.

To switch on the power

- Connect the power cord to the uDeluxe Max power inlet.
- Connect the power plug to the electrical outlet.
- Push the main switch located at the back of the uDeluxe Max to turn it on or off.

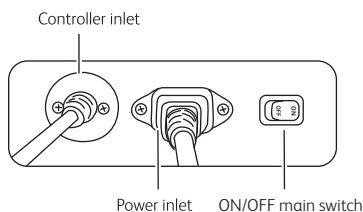

Caution

- Make sure all switches are turned off (including the main switch) before the power plug is connected to an electrical outlet.

Note

- If the rollers are located in the middle of the backrest when operation is terminated, they will return to the default position when the main switch is turned on again.

Preparation before use

Moving the uDeluxe Max


The uDeluxe Max is fitted with casters for easy maneuvering over a short distance.

Before moving the uDeluxe Max:

- Raise the backrest fully to its upright position and retract the footrest fully.
- Turn off the main power switch and disconnect the power plug from the electrical outlet.


Moving method (1)

- Lift up the front of the uDeluxe Max as shown and wheel it to the desired location.

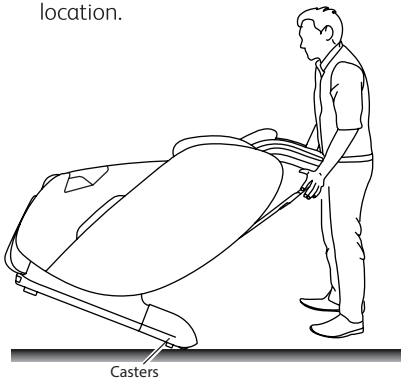

Moving method (2)

- Move the uDeluxe Max by lifting it as shown.

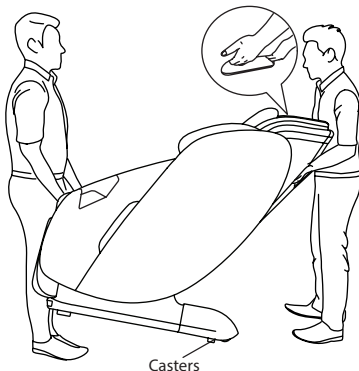


Caution

- Do not move the uDeluxe Max with someone on it. This will cause the uDeluxe Max to tip over and cause accident and injury.

Adjusting the lower arm airbag massage units

- Raise both sides of the lower arm airbag massage units fully as shown.

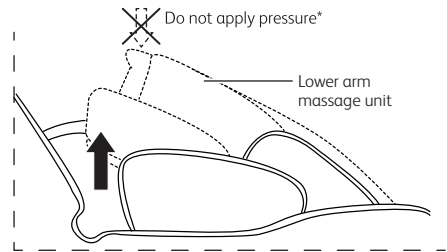

Caution



- Do not apply pressure on the lower arm airbag massage unit when in use as any sudden heavy weight on the lower arm airbag massage unit may result in injury.

Preparation before use


Footrest/Ottoman function

The footrest can be rotated into an ottoman.


- Extend the footrest until it is fully extended out from the seat.
- Push the footrest slightly and lift up the ottoman lever before rotating the footrest in the direction as shown.

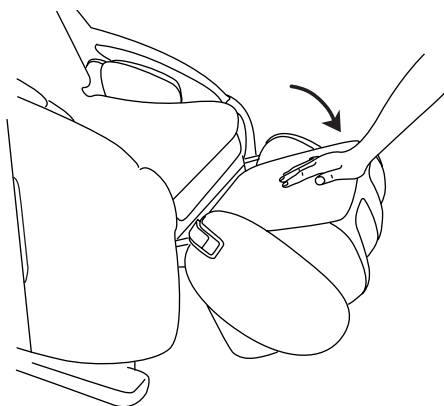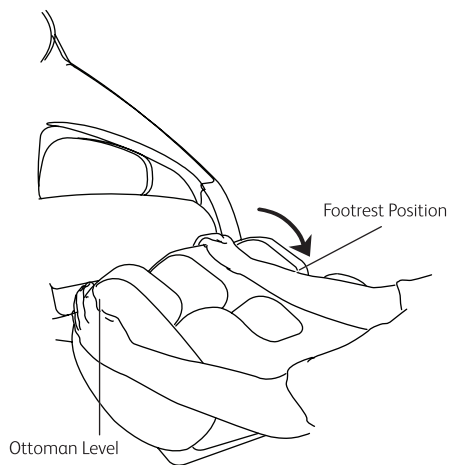

- A 'click' sound can be heard to indicate that the footrest is in the ottoman position.
- Release the lever and the footrest will be fixed in the ottoman position.

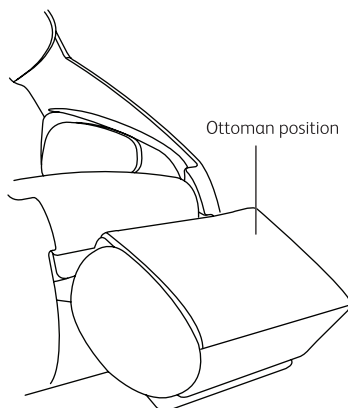

- Pull the ottoman slightly and lift up the lever to rotate back to footrest position.

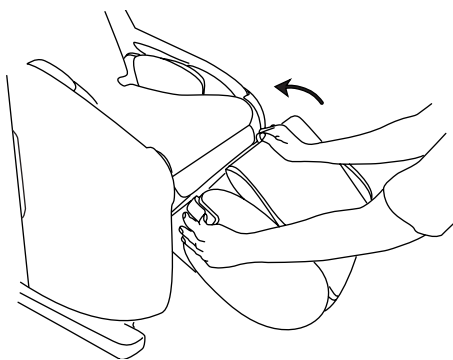

Note

- Footrest can be kept either in ottoman or footrest position.
- Do not rotate the footrest when the massage is in operation.

Preparation before use

Backrest angle adjustments

To raise the backrest

- Press and hold the backrest raising button [] until the backrest is lifted to the desired angle.

To recline the backrest

- Press and hold the backrest reclining button [] until the backrest is lowered to the desired angle.

Footrest adjustments

To raise the footrest

- Press and hold the footrest raising button [] until the footrest is raised to the desired height or length.

To lower the footrest

- Press and hold the footrest lowering button [] until the footrest is lowered to the desired height or length.

Upright position

- Press and hold the Upright button [] on the controller to return the backrest and footrest to the default upright position.



Caution

- **When adjusting the backrest and footrest, always ensure there is no object under/near the footrest/seat and keep children or pets away to prevent injury.**
- Do not sit on the footrest when it is raised. Any sudden heavy weight on the footrest could cause damage to the mechanism, accident or injury if the uDeluxe Max tips over.
- Ensure that the backrest returns to its most upright position before sitting on the uDeluxe Max, and reclining it according to your preference.
- Do not place fingers or objects in the gaps between the seat and the backrest/footrest.


Note

- Backrest will only start raising/reclining after the massage rollers stop moving.


Preparation before use

In the event of power failure

- Support two arms on the side frames, lift and move your butt to the edge of the seat.

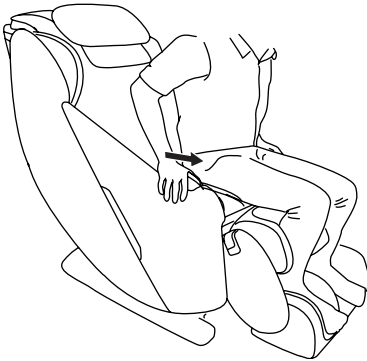

- Lift your knees upwards and ease them out.

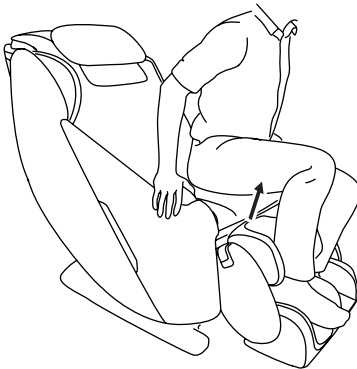


- Turn off the main switch and disconnect the power cord to prevent any sudden operation of the massage chair if the power is restored unexpectedly.

Massage programs and selections

Auto massage programs

- Adjust the backrest to the desired angle and the footrest to the desired height or length.
- Choose the 8 auto massage programs in the following sequence to suit your needs.

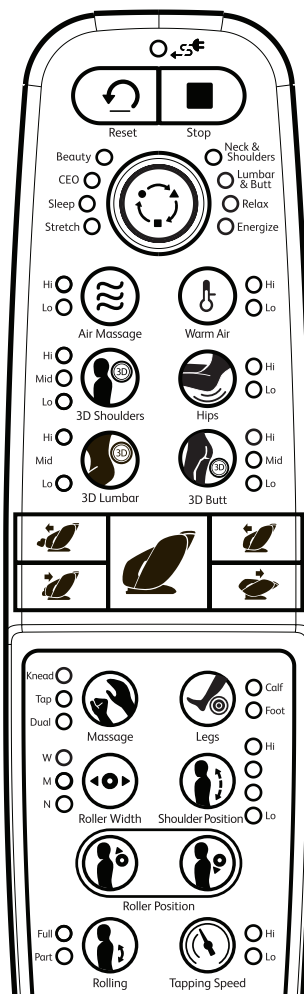

1 Select any of the 8 auto massage programs:

- Neck & Shoulders
- Lumbar & Butt
- Relax
- Energize
- Beauty
- CEO
- Sleep
- Stretch

Once an auto massage program button is pressed, the respective LED indicator will illuminate.

2 Shoulder position will be automatically detected or adjust to your desired roller shoulder position by manually pressing the Shoulder Position button [] (7 Levels, refer to page 17).

3 The selected auto massage program will begin.

4 You can adjust the intensity or switch off the Arm and shoulder /Hips airbag massage by pressing the [] or [] buttons respectively. Warm Air can also be turn on and off with []. The LED indicator light will not illuminate when switched off.

5 By default, the rollers are set at 'Mid' protrusion level. You can adjust the protrusion level on 3D Shoulders/ 3D Lumbar/ 3D Butt by pressing the [], [] or [] buttons respectively (refer to page 17).

6 By default, the Calf and Foot leg massage will be on. Press the Legs button [] to switch off.

7 After the massage is completed, the rollers will return to the default position.


Note

- Before selecting 'Stretch' auto massage program, please ensure that the backrest is fully reclined and the footrest is fully raised to avoid hitting any obstacles under the footrest. This may activate the safety mechanism and stop the program.

Massage programs and selections

Manual massage programs

- Adjust the backrest to the desired angle and the footrest to the desired height or length.

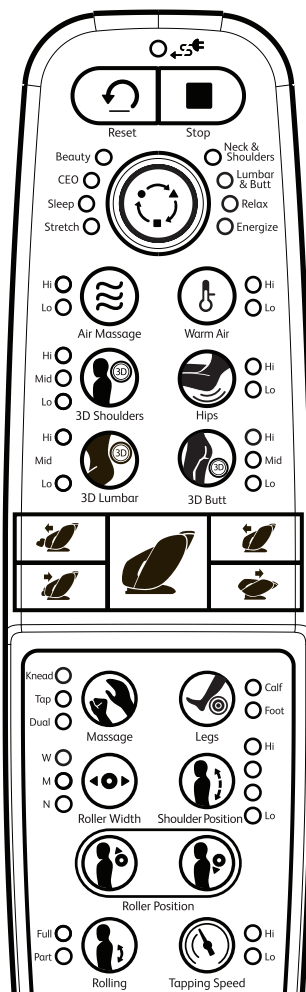

- 1 Select and combine manual massage programs from menus 1 to 4 according to your preference.
Once a manual massage program button is pressed, the respective LED indicator will illuminate.
- 2 When menus 1 and 2 are selected, manually adjust to your desired roller shoulder position by pressing the Shoulder Position button [] (7 Levels, refer to page 17).
- 3 The selected manual massage program/s will begin.
- 4 When menus 1 and 2 are selected, you can adjust the protrusion level on 3D Shoulders/ 3D Lumbar/ 3D Butt by pressing the [], [] or [] buttons respectively (refer to page 17).
- 5 During operation, you can adjust the roller width and roller position depending on the selected manual massage programs.

Menu 1

Knead

Simulates the thumb-kneading action and circular motion of a massage therapist.

- Press the Massage button [] once and the Knead LED indicator will illuminate.
- Press and hold the Roller Position button [] / [] to adjust the roller position.

Tap

The percussive massage works like the rolled-up fists of a skilled masseuse.

- Press the Massage button [] two times and the Tap LED indicator will illuminate.
- Press and hold the Roller Position button [] / [] to adjust the roller position.
- Adjust roller width by pressing the Roller Width button [] (Wide, Mid, Narrow).
- Adjust tapping speed by pressing the Tapping Speed button [] (Hi, Lo).

Massage programs and selections

Manual massage programs

Menu 1

Dual

Combines the synergy of Tapping and Kneading massage.

- Press the Massage button [- Press and hold the Roller Position button [- Adjust tapping speed by pressing the Tapping Speed button [

Menu 2

Rolling massage

Full rolling

Rollers move up and down the entire back to stretch muscles, relieve muscle tension, improve circulation and relaxes the back.

Partial rolling

Rollers move up and down a targeted part of the back.

- Press the Rolling button [

Menu 3

Airbag massage

Arm and Shoulder airbag massage

- Press the Airbag massage button [- Press the same button to switch among Hi, Lo or Off.

Hips airbag massage

- Press the Hips button [- Press the same button to switch among Hi, Lo or Off.

Menu 4

Legs massage

- Press the Legs button [- Press the same button to switch among Calf, Foot, both or Off.

Massage programs and selections

Massage adjustments

- Manually adjust the protrusion level of the 3D rollers and Shoulder Position anytime during the massage.

3D rollers for Shoulder, Lumbar and Butt

- Press the 3D Shoulder button  or 3D Lumbar button  to adjust roller protrusion (5 levels). The specific pattern of the illuminating LED indicator is as below.

(5 Levels)

	1	2	3	4	5
Hi	○	○	○	●	●
Mid	○	●	●	○	○
Lo	●	●	○	○	○

- Press the 3D Butt button  to adjust roller protrusion (3 levels). The specific pattern of the illuminating LED indicator is as below.

(3 Levels)

	1	2	3
Hi	○	○	●
Mid	○	●	○
Lo	●	○	○

Shoulder position

- Adjust rollers position on your shoulders by pressing the Shoulder position button  (7 levels). The specific pattern of the illuminating LED indicator is as below.

(7 Levels)

	1	2	3	4	5	6	7
Hi	○	○	○	○	○	○	●
	○	○	○	●	●	●	○
	○	●	●	●	○	○	○
Lo	●	●	○	○	○	○	○

Overall massage

- Combine any of the following manual massage programs to give you a more effective and personalized massage.
-  (Kneading, Tapping, Dual) +  (Full, Partial rolling) +  (Arm and Shoulder massager) +  (Hips) +  (Legs) +  (Warm Air).

To stop all operation

- Press the Stop button  to stop all massage functions immediately.
- Press the Reset button  to stop and reset the massage programs. Rollers will return to default position.
- Turn off the main switch at the lower back of the uDeluxe Max.

Massage programs and selections

To start a massage session

- Turn on the main switch located at the back of the uDeluxe Max.

To stop a massage session

- Press the Stop button [■], then press the Reset button [↺] on the controller. This will bring the rollers back to the default position and all airbags will deflate.

To switch off the uDeluxe

- To switch off, press the Reset button [↺] to return the rollers to its default position, and turn off the main switch.

Note


- In the event of any emergency or malfunction, press the Stop button [■] (refer to page 6) to stop massage immediately.

After using the uDeluxe Max

- Return the backrest to the upright position and lower/retract the footrest completely after use.


Caution

- While lowering the footrest, do not fully extend your legs to avoid abrasion with the floor.

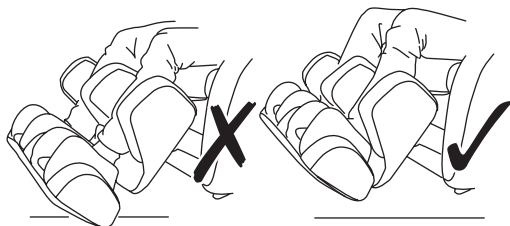

Lower arm massage unit

- Push down the lower arm massage unit until it returns to its default position.

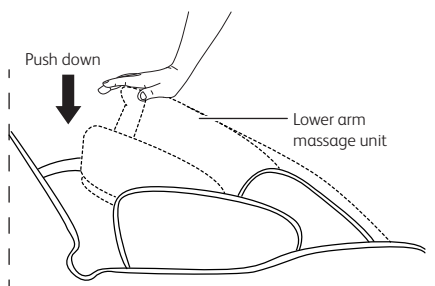

Product care and storage

Chair placement and storage

Environmental factors can strongly affect the product physically and mechanically. Do not expose the product to direct sunlight or in places with extreme heat or air-conditioning vents. These can cause the upholstery to dry up, crack or the color to fade.

If the product is not to be used for a long period of time, cover it with a dust cover and disconnect the power plug from the electrical outlet.

Clean the product using a dry cloth regularly

Before cleaning, ensure that the main switch is turned off and the power plug is disconnected from the electrical outlet.

The upholstery of the product is customarily exposed to the natural body oils of users. The main unit structure and fabric can be cleaned thoroughly with a piece of soft, dry cloth. The common micro-fiber cleaning materials or gloves are very well suited for this routine maintenance process. Such materials and gloves are available for sale in most DIY shops.

Do NOT use wet elements for cleaning

The product is made up of electrical components and mechanical parts, which are all very sensitive to moisture. Under no circumstances should they be exposed to any form of water or moisture. If you use water (eg. a wet cloth) to clean the upholstery, the coating may be eroded and the protection for the product will be diminished.

As for the controller, it may result in malfunction if you use a wet cloth to clean.

Do NOT use cleaning solvents

Under no circumstances should you use any cleaning agents, like benzene or thinner to clean the product. This may cause the color of the upholstery to fade.

Do not wash the upholstery using washing machine. This may result in the deterioration of upholstery quality.

Do NOT attempt to repair your product

Under no circumstances should you attempt to repair the product, for safety reason. If you suspect a malfunction, always call OSIM Service Center for further assistance and information.

Troubleshooting

If you encounter problems with the operation of the uDeluxe Max, please check the following points to see if they can be rectified. If the uDeluxe Max still malfunctions or does not work, please switch off the uDeluxe Max and remove the power plug from the electrical outlet. Contact OSIM Service Center* for servicing.

Do not disassemble or attempt to repair the uDeluxe Max yourself. Doing so will void the warranty and OSIM will not be responsible for any subsequent consequences.

Problem	Possible causes/actions
• Frictional sound of rollers against backrest. • Motor sound during operation. • Loud sound during tapping and kneading massage program.	• These sounds originate from the internal mechanism within the uDeluxe Max massage chair during operation. • This may occur during normal usage and is not due to malfunction.
• Operation stops and the massage rollers move to its default position.	• The auto timer of 15 minutes has lapsed. Press any massage program button to restart. • The Reset button [↺] was pressed accidentally. • The uDeluxe Max is equipped with a thermal resetting protection device. This is an added safety feature to protect your massage chair from overheating. • If the uDeluxe Max stops and fails to restart as a result of overheating, turn off the main power switch for at least 30 minutes. Failure to do so may result in the uDeluxe Max resuming operation unexpectedly when the device cools down.
• Controller does not function correctly.	• Check the power plug and ensure that it is securely connected to the electrical outlet. • Check the connection at the back of the uDeluxe Max. • Ensure that the main switch is turned 'ON'.
• Power cord and plug are abnormally hot.	• Stop use immediately and contact OSIM Service Center for assistance.
• Massage stops midway.	• The auto timer of 15 minutes has lapsed. Press any massage program button to restart. • The Safety Stop button [■] or Reset button [↺] was pressed accidentally. • Turn off the main switch located at the back of the chair. Turn it on again after 5 seconds. • If the same problem persists, please turn off the main switch, disconnect the power plug from the electrical outlet and contact OSIM Service Center.

Troubleshooting

Problem	Possible causes/actions
The uDeluxe Max does not function.	- Ensure that the main switch and the switch on the electrical outlet is turned on. - Ensure that the power plug is firmly connected to the electrical outlet. - Check that the voltage at the electrical outlet is adequate.
Footrest massage unit does not function.	- Check that the leg massage function is turned on. - Check that the footrest massage unit is extended. - Check the power plug and ensure that it is securely connected to the electrical outlet. If the same problem persists, please contact the OSIM Service Center.
Massage rollers stop during the massage session.	- The roller mechanism may be strained when the massage speed is slow and subjected to excessive force. - Do not apply excessive force on the rollers.
The backrest and footrest cannot be reclined/raised or retracted/extended.	Ensure that no obstacle is caught behind the backrest or under the footrest as this activates the safety mechanism.
Beeping sound from the controller.	Turn off the main switch located at the back of the chair and turn it on again after 5 seconds.
Unsuccessful shoulders detection.	- Sit in the deepest position of the chair and keep your head on the pillow during the body scan. - Readjust shoulders position using auto or manual shoulder adjustment.
Backrest massage stops when the backrest is reclining.	For safety, the backrest massage will stop when adjustments are being made to the backrest.
If you encounter any problems other than the ones stated above, or the same problem persists.	Turn of the main switch, disconnect the power plug from the electrical outlet and contact OSIM Service Center for assistance.

* Please visit us at **www.OSIM.com** for information on the nearest service center.
Product warranty is valid only in the country of purchase.

Specifications

Model name	OSIM uDeluxe Max
Model number	OS-8210
Voltage available	220-240V~ 50/60Hz (180W) 110V~ 60Hz (180W) 220V~ 50Hz (370W) (Maximum power under steady state operation) (Kindly ensure that the local Alternating Current (AC) voltage corresponds with product specified voltage)
Auto timer	15 minutes
Chair dimensions	
Upright position	122 (L) x 74 (W) x 115 (H) cm
Reclined position	179 (L) x 74 (W) x 90 (H) cm
Weight	
Gross weight	Approx. 99 kg
Net weight	Approx. 81 kg

Notes

Notes

OS-8210 uDeluxe Max

感谢您购买 OSIM uDeluxe Max 按摩椅（傲胜大天王 Max）。使用前请仔细阅读操作手册，并特别注意安全事项，以便正确操作和使用本产品。

本手册提供使用者安全及有效的操作方式，请在阅毕后妥为收藏，以便日后参考查询。

目录	安全事项	2
	配件名称与功能	5
	产品特性	7
	使用前准备	8
	按摩功能及选项	14
	产品保养及收纳	19
	故障排除	20
	规格说明	22

重要安全事项说明

使用本产品时，请**特别注意并遵守**下列安全事项：

使用本产品前，请先详阅所有的说明。

危险 — 为降低触电风险，请遵照下列指示：

使用完毕后或清洁前，请将电源线插头/USB电缆由插座中拔除。

警告 — 为降低走火、灼伤、触电、或是造成他人受伤的风险，请遵照下列指示：

- 1) 请务必依照使用手册中所叙述的用途使用本产品。请勿使用非制造商所推荐的零配件。
- 2) 插入电源时，绝不应不看管产品。在不使用电源时，请拔下电源插头。
- 3) 请勿在毯子或枕头下操作本产品。过热可能会造成火灾、触电或人员受伤。
- 4) 如果电源松动，请勿使用本产品。
- 5) 请勿用湿手将电源插头/USB电缆与电源插座/电源连接或断开。
- 6) 断开电源插头/USB电缆时，按住插头/USB电缆头（而不是电源线/电缆）将其拔出。
- 7) 如果产品有损坏的电源线或插头/USB电缆、故障、电源故障或掉入水中，请勿操作本产品。意外恢复电源时，可能会造成伤害。将产品退回 OSIM 服务中心进行检查和维修。
- 8) 如果电源插头/USB电缆或电源线损坏，必须由 OSIM 服务中心或其授权服务代理更换。
- 9) 请勿拖拉电源线/USB电缆来移动产品或是将电源线/USB电缆当作握把使用。
- 10) 电源线务必和加热表面保持安全距离。
- 11) 请勿将电源线/USB电缆放在产品或任何其他重物下。
- 12) 请勿将电源线/USB电缆缠绕于产品上。
- 13) 请勿在出气口阻塞的状况下操作本产品。请保持出气口通畅，避免被棉屑，毛发等物阻塞。
- 14) 不慎将液体倾倒在产品上时，请立即将电源线插头/USB电缆自插座中拔除，以免导致触电。
- 15) 请勿在使用喷雾产品时或于氧气不足的场所操作本产品。
- 16) 欲切断电源，请将所有的操作控制关闭后，将电源线插头由电源插座中拔除。
- 17) 请勿将任何物体或易燃材料掉落或插入产品的任何开口中。这可能会导致触电、故障或火灾风险。
- 18) 请务必确认孩童未将本产品视为游乐器材使用，以确保其安全。
- 19) 对于 8 岁以上 (含) 的儿童和身体、感官或精神上有缺陷或缺乏经验与知识的人员，倘若其得到负责其安全的人员监护或接受过监护人有关电器使用的指导并已了解到可能的危险，则可以使用本电器。
- 20) 儿童不得进行产品清洗或维护。
- 21) 当身体或手湿时，请勿使用或操作本产品。
- 22) 请勿在室外使用本产品。
- 23) 请勿在过度潮湿或灰尘密集的环境下使用产品，以免导致机件故障。
- 24) 请勿在室温超过摄氏 40 度之处使用产品。

- 25) 请勿将产品置于电热器旁、炉具附近或阳光直射处。
- 26) 操作过程中不要盖住产品。这可能导致电机温度升高以及随后的故障或火灾。
- 27) 雷电情形发生时请勿使用产品。
- 28) 在偏低室温中使用产品，切勿骤然调升温度。建议将温度逐步调至正常范围后再使用。
- 29) 若是将产品由低温的储存处移至温暖环境使用时，可能会因为机件内水气聚集而影响机器正常运作，造成机件故障。建议移动后，先将产品在正常室温放置 1 小时后再开始使用。
- 30) 最初使用时，请小心，在低强度/短度下进行测试，同时了解不同电机的工作方式以及您喜欢的强度。
- 31) 如果首次使用本产品，请务必开始使用柔和的按摩程序。
- 32) 在按摩进行中，若是脚不小心由足部按摩器中滑落出去，切勿用力将脚挤回足部按摩器，以免造成伤害及机件。
- 33) 不可站在本产品上，必须坐在座位上才能使用本产品。
- 34) 将产品放在平坦的防滑地板上使用。
- 35) 如果产品的织物撕裂且内部部件暴露，请勿使用本产品。
- 36) 请勿自行拆卸或维修产品。碰触内部机件可能导致机件故障或触电意外。
- 37) 请勿拆卸、掉落或使产品受到冲击或振动。
- 38) 为避免按摩效果减低或造成伤害，请勿将产品与其它具有疗效之设备或地毯等同时使用。
- 39) 请勿将重物堆放于扶手、足部按摩器或椅背上，以免造成意外伤害或是机件故障。
- 40) 产品仅能由 OSIM 傲胜服务中心维修。使用者请勿自行尝试拆卸或维修。
- 41) 在使用中，可能会听到产品发出一些噪音。这是由于产品的结构，是正常的。
- 42) 请勿在饮酒后或身体感到任何不适时使用产品。
- 43) 按摩时若身体感到任何不适，请立即停止操作。身体产生不正常或严重疼痛时，请寻求医疗咨询。
- 44) 该产品的表面为加热。对热不敏感的人使用本产品时必须小心谨慎。
- 45) 本产品非作为自我诊断或治疗之用；如需要诊断或治疗时，应由专业医疗人员处理。
- 46) 如果您正接受任何药物治疗或属于以下任何类别（但不限于），请在使用前寻求医疗咨询。
 - 心脏病
 - 高血压或低血压、深静脉血栓
 - 怀孕
 - 糖尿病
 - 体内植入了医疗器械（例如心脏起搏器，自动心脏复律除颤器）
 - 最近动过手术
 - 患有任何骨骼疾病，如骨折、骨质疏松
- 47) 使用按摩器时，不要对颈部背部施加过大的力。
- 48) 请勿使用未覆盖椅套或椅垫的按摩椅，以避免造成伤害或导致机件故障。
- 49) 为了达到最佳效果，每个自动按摩程序的特设时长为 15 至 30 分钟。长时间连续使用可能会触发过热保护装置，因此再次使用前，请确保产品休息 10 分钟。


- 50) 定期按摩有助于身心健康。请适度的按摩，以避免过度刺激。保持均衡的按摩习惯，才能充分体验按摩带来的益处。
- 51) 建操作时请勿将手或脚插入按摩滚轮移动的途径内，以避免发生意外伤害。

请妥善保管此份安全事项说明书

本产品仅适于家用
如果产品用于商业目的，保修将被取消

配件名称与功能

按摩椅

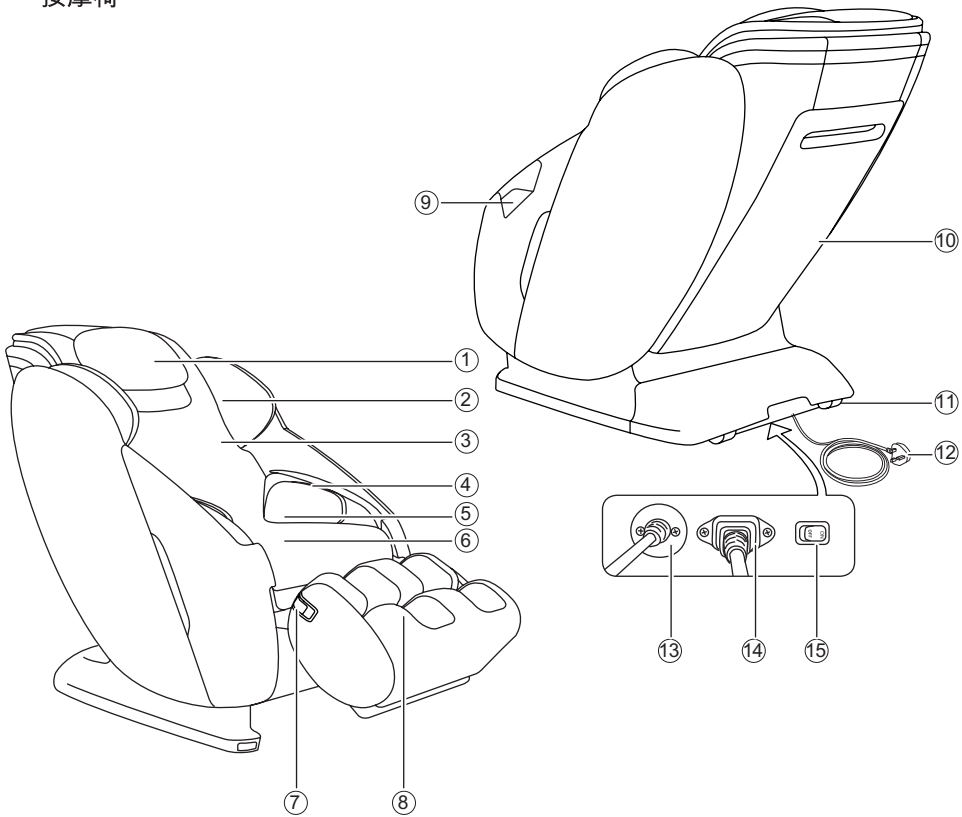


*产品图片仅供说明用途，并不按比例绘制。

- | | |
|------------|----------------|
| 1. 头枕 | 9. 遥控器口袋 |
| 2. 上臂气囊按摩器 | 10. 椅背外壳 |
| 3. 椅背衬垫 | 11. 脚轮 |
| 4. 下臂气囊按摩器 | 12. 电源线与电源线插头* |
| 5. 臀部气囊按摩器 | 13. 遥控器输入插孔 |
| 6. 椅座 | 14. 电源输入插孔 |
| 7. 搁脚凳拉杆 | 15. 总电源开关 |
| 8. 足部按摩架 | |

* 电源线插头及开关的样式将根据各国的要求而有所不同。

配件名称与功能

遥控器

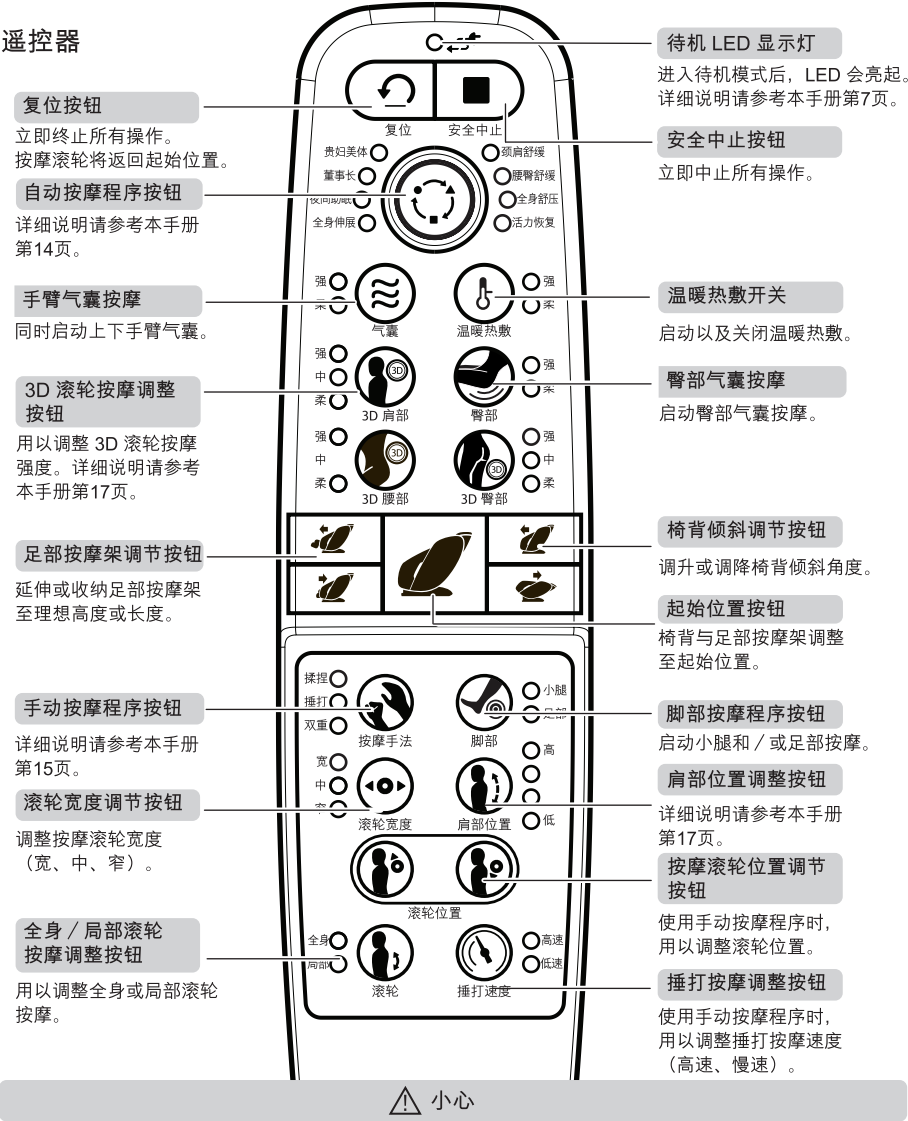

⚠ 小心

- 请勿坐、踩或将重物堆放在遥控器上面。
- 避免掉落遥控器。不使用遥控器时，建议将它放进遥控器侧边收纳袋中。
- 请勿施以不当压力于遥控器。
- 双手潮湿时，请勿操作遥控器。
- 请勿用锋利或坚硬的物体操作遥控器，以免造成机件故障。

产品特性

全身按摩

- 智能又精准的全身按摩，具有6滚轮式的 3D 深层按摩系统，气压按摩与揉捏盘按摩
- 肩部位置自动检测功能让您享有更加个人化的按摩
- 可调整气压按摩在您的臀部、上肩和下肩（强、柔）
- 可调整 3D 滚轮位置
 - 3D 肩部（共5级）
 - 3D 腰部（共5级）
 - 3D 臀部（共3级）
- 滚轮宽度调整（宽、中、窄）
- 手动按摩时可调整滚轮位置
- 以强而有力的包覆式脚部按摩，按摩您的小腿和足部

自动按摩与手动按摩程序

- 8种自动按摩程序
 - 颈肩舒缓、腰臀舒缓、全身舒压、活力恢复、全身伸展、夜间助眠、董事长和贵妇美体
- 可调整手动按摩
 - 揉捏、捶打、双重与滚轮（全身 / 局部）按摩
 - 上臂、下臂与臀部气压按摩
 - 小腿和足部包覆式按摩

按摩椅位置

- 收纳式足部按摩架，节省居家空间
- 多重用途的足部按摩架可作为搁脚凳使用
- 只要轻轻一按遥控器，便可轻松将足部按摩架和椅背返回至起始位置

其它特性

- 15分钟自动定时
- 易于操作的遥控器选择项目及调整按摩程序
- 位于按摩椅后方的脚轮，方便移动


待机 LED 指示灯的定义

- 当待机 LED 指示灯亮起时，代表产品已经进入了待机模式，此时产品的待机功率小于 0.8W。这个符号 [] 是在提醒用户在不使用时拔掉电源插头，保障安全和节能。


使用前准备

安装 uDeluxe Max

- uDeluxe Max 是以椅背后仰状态的方式包装。
- 如图所示，使用前请确保椅背调升至直立状态。

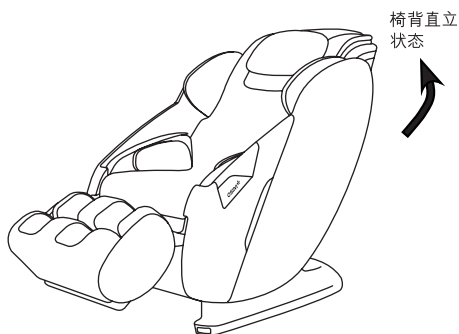

- 如图所示，对齐头枕上的拉链后，将拉链拉上。

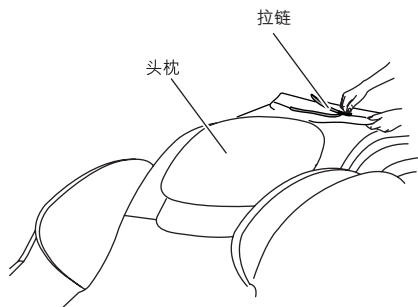


小心

- 请勿拆除椅背衬垫。

放置头枕


- 将枕垫松散的部分平整放置在头枕带下方并如图所示，翻转头枕。

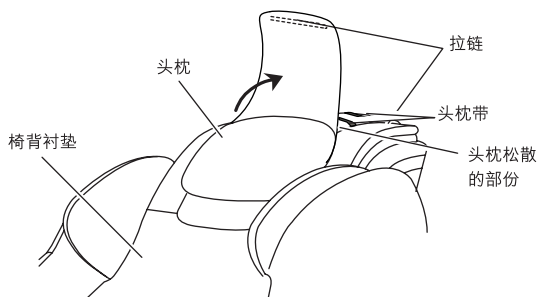

使用前准备

放置 uDeluxe Max


- 操作前请先确定在 uDeluxe Max 后方有70厘米，前方有80厘米以上的空间（如图所示），以便在使用中能够将 uDeluxe Max 椅背安全后仰及延伸足部按摩架。
- 为避免讯号干扰，uDeluxe Max 必须与电视、收音机等影音设备保持1米以上的距离。

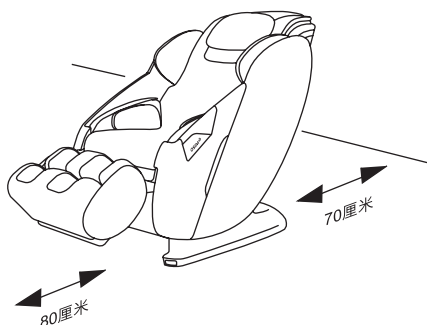

- 由于 uDeluxe Max 甚为沉重，放置时请务必小心，以避免损坏地板表面。
- 建议在 uDeluxe Max 下方垫上地毯，以防地面刮伤并降低使用中的噪音。

开启电源

- 将电源线插入 uDeluxe Max 电源输入插孔。
- 将电源线插头插入电源插座。
- 开启或关闭位于 uDeluxe Max 后方的总电源开关。

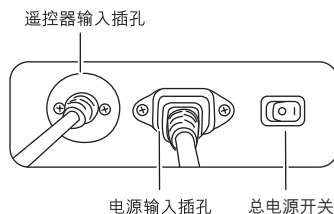

小心

- 在插上电源线插头之前，请先确认所有的开关（包括总电源开关）都在「关」的状态。

注意

- 若按摩操作终止时，椅背滚轮停留在椅背中央，则再次开启总电源后，滚轮即会返回到起始位置。

使用前准备

移动 uDeluxe Max

uDeluxe Max 附有脚轮，以方便移动。

在移动 uDeluxe Max 之前：

- 将椅背调升至完全直立状态，并将足部按摩架收纳。
- 关闭总电源开关并将电源线插头由插座中拔除。


移动方式（1）

- 如图所示，抬起 uDeluxe Max 前方两侧并使用脚轮推动至理想位置。



移动方式（2）

- 如图所示，抬起后搬动 uDeluxe Max。

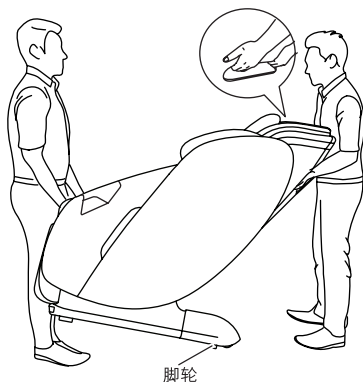


⚠ 小心

- 有人坐在按摩椅中时，请勿移动 uDeluxe Max。这可能将 uDeluxe Max 翻倒造成事故和伤害。

调整下臂气囊按摩器

- 如图所示，将两侧的下臂气囊按摩器拉出。

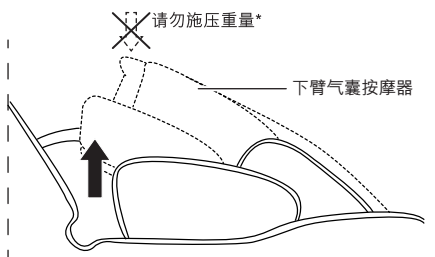

⚠ 小心



- 请勿在按摩下臂时在下臂气囊按摩器上施压重量，瞬间的重量可能会造成伤害。

使用前准备


足部按摩架 / 搁脚凳功能

足部按摩架可转变成搁脚凳。


- 延伸足部按摩架直到完全从椅座底部伸出。
- 轻微推下足部按摩架后，持续拉起搁脚凳拉杆，如图所示转向指定的方位，旋转搁脚凳。

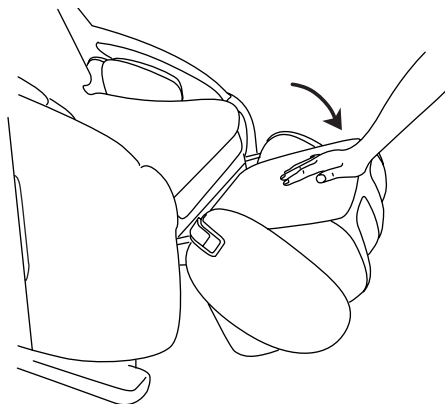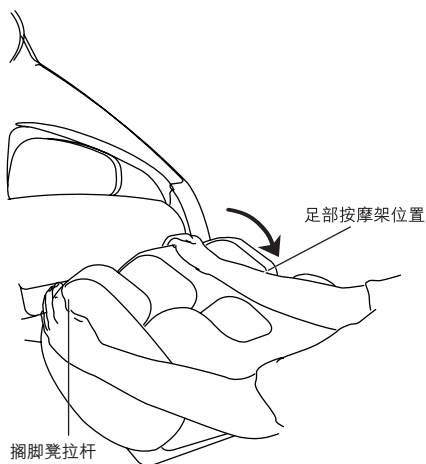

- 将搁脚凳旋转直到听到进入定位的「喀」声为止。
- 松开拉杆以固定搁脚凳位置。

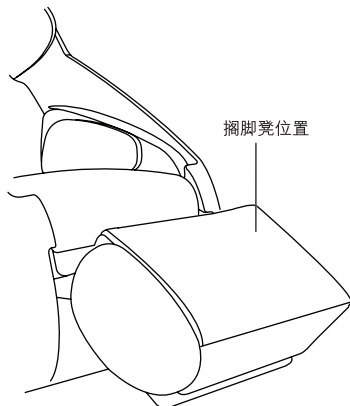

- 轻微拉上搁脚凳再拉起搁脚凳拉杆，如图所示转向指定的方位旋转回足部按摩架位置。

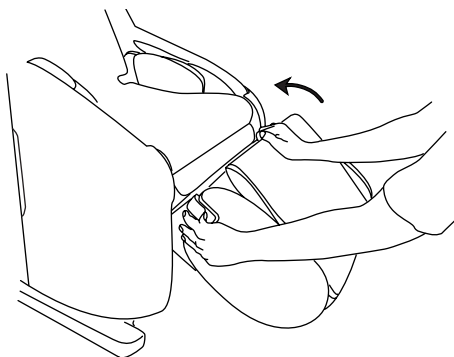

注意

- 足部按摩架位置或搁脚凳位置都可收纳按摩椅内。
- 在操作时，请不要旋转足部按摩架。

使用前准备

调整椅背倾斜角度

调升椅背

- 持续按住椅背上升按钮 [

调降椅背

- 持续按住椅背下降按钮 [

调整足部按摩架

延伸足部按摩架

- 持续按住足部按摩架延伸按钮 [

收纳足部按摩架

- 持续按住足部按摩架收纳按钮 [

起始位置

- 持续按住遥控器上的起始位置按钮 [



- 当调整椅背与足部按摩架时，请确保足部按摩架 / 椅座附近或下方没有任何物件；儿童或宠物请勿靠近，以免受伤。
- 当足部按摩架调升时，请勿坐于其上。瞬间在足部按摩架上施压重量，将导致机件受损，甚至造成 uDeluxe Max 倾覆而酿成意外或受伤。
- 坐进 uDeluxe Max 前，请先确认椅背已经竖直，坐入后再依个人喜好调整仰躺角度。
- 请勿将手或异物放入椅座和椅背与足部按摩架之间缝隙。


注意

- 按摩滚轮停止移动后，才能启动椅背上升或下降。


使用前准备

若发生电源故障

- 用手臂支撑按摩椅两侧扶手，轻移臀部至椅座边缘。

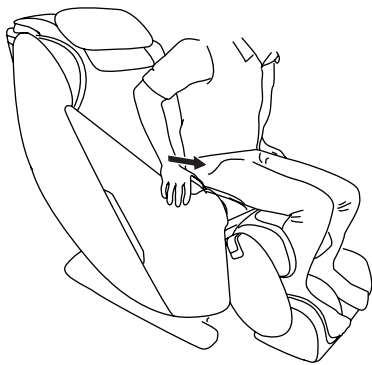

- 抬高您的膝盖即可轻易移出。

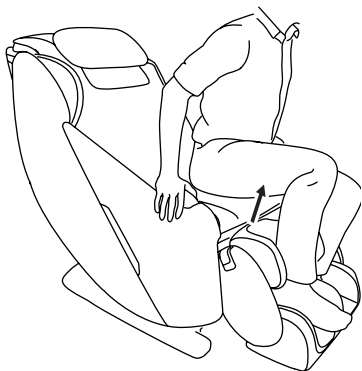


- 若发生电源故障，请关掉总电源开关并拔掉电源线插头，以免按摩椅在电源突然恢复的情形下重新操作起来。

按摩功能及选项

自动按摩程序

- 调整椅背至理想角度，和足部按摩架至理想高度或长度。
- 通过以下顺序选择8种自动按摩程序，符合您不同的按摩需求。

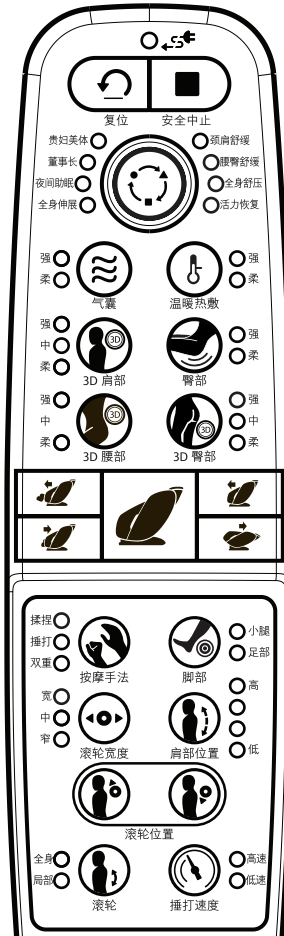

1 任意选择下列8种自动按摩程序：

- 颈肩舒缓
- 腰臀舒缓
- 全身舒压
- 活力恢复
- 贵妇美体
- 董事长
- 夜间助眠
- 全身伸展

一旦按下自动按摩程序选项按钮，被选取的按摩程序 LED 显示灯便会亮起。

2 肩部位置将自动检测。您也可依个人喜好，按下肩部位置按钮 [①] 手动调整肩部滚轮位置（7段，请参考第17页）。

3 被选取的自动按摩程序将开始按摩。

4 按下气压按摩按钮 [②] 或 [③] 调整上手臂、下手臂和臀部气压按摩强度或关闭其功能。温暖热敷启动按钮 [④]。关闭气压按摩后其 LED 显示灯便不会亮起。

5 在原始的设定下，3D 肩部 / 3D 腰部及 3D 臀部功能将会设定在「中」强度。您可以依个人喜好，按下该部位的按钮 [⑤]、[⑥] 或 [⑦] 调整至理想强度（请参考第17页）。

6 在原始的设定下，小腿和足部按摩将会被启动。按下脚部按钮 [⑧] 关闭其功能。

7 按摩完成后，按摩滚轮即回到起始位置。


注意

- 选择「全身伸展」自动按摩程序之前请确保调整椅背完全下降、足部按摩架完全延伸，避免击中足部按摩架下方的任何物件。这可能会启动安全功能而停止按摩程序的操作。

按摩功能及选项

手动按摩程序

- 调整椅背至理想角度，和足部按摩架至理想高度或长度。

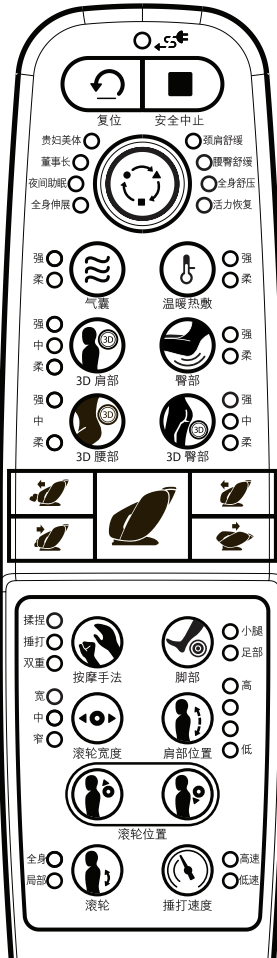

1 依个人喜好，由选单1至4中选取并组合各项手动按摩功能。
一旦按下手动按摩程序选项按钮，被选取的按摩程序 LED 显示灯便会亮起。

2 选取选单1或2时，您也可依个人喜好，按下肩部位置按钮 [1] 手动调整肩部滚轮位置（7段，请参考第17页）。

3 被选取的手动按摩程序将开始按摩。

4 选取选单1或2时，您可以依个人喜好，调整 3D 肩部 / 3D 腰部及 3D 臀部功能，按下该部位的按钮 [1]、[2] 或 [3] 调整至理想强度（请参考第17页）。

5 在按摩进行中，您可根据选定的手动按摩程序随时调整滚轮宽度或是滚轮位置。

选单1

揉捏

模拟拇指揉捏的按摩手法和专业按摩治疗师的旋转揉压技法。

- 按下按摩手法按钮 [1] 一次，「揉捏」LED 显示灯将会亮起。
- 持续按住滚轮位置按钮 [1] / [2] 调整滚轮位置。

捶打

敲击的按摩动作，仿如经验丰富的按摩师的双拳。

- 按下按摩手法按钮 [1] 两次，「捶打」LED 显示灯将会亮起。
- 持续按住滚轮位置按钮 [1] / [2] 调整滚轮位置。
- 按下滚轮宽度按钮 [1] 可调整按摩滚轮宽度（宽、中、窄）。
- 按下捶打速度按钮 [1] 可调整捶打速度（高速、低速）。

按摩功能及选项

手动按摩程序

选单1

双重

结合捶打和揉捏技法。

- 按下按摩手法按钮 [] 三次，「双重」LED 显示灯将会亮起。
- 持续按住滚轮位置按钮 [] / [] 调整滚轮位置。
- 按下捶打速度按钮 [] 可调整捶打速度（高速、低速）。

选单2

滚轮按摩

全身滚轮

按摩滚轮沿着背部上下移动。

局部滚轮

按摩滚轮针对局部上下移动。

- 按下滚轮按钮 [] 选择全身或局部滚轮按摩。相应的 LED 显示灯将会亮起。

选单3

气囊按摩

上下手臂气囊按摩

- 按下 [], LED 显示灯将会亮起。
- 再次按下气囊按钮可在强、柔或关闭模式之间转换。

臀部气压按摩

- 按下臀部按钮 [], LED 显示灯将会亮起。
- 再次按下臀部按钮 [] 可在强、柔或关闭模式之间转换。

选单4

脚部按摩

- 按下脚部按钮 [], LED 显示灯将会亮起。
- 再次按下脚部按钮 [] 可在小腿、足部或关闭模式之间转换。

按摩功能及选项

按摩调整

- 即可在按摩中手动调整 3D 滚轮强度和肩部位置。

肩部、腰部和臀部的 3D 滚轮位置

- 按下 3D 肩部按钮 [👤] 或 3D 腰部按钮 [👤] 调整滚轮按摩强度 (5级)。LED 显示灯将会依据以下特定模式亮起。

(5级)

	1	2	3	4	5
强	○	○	○	●	●
中	○	●	●	●	○
柔	●	●	○	○	○

- 按下 3D 臀部按钮 [👤] 调整滚轮按摩强度 (3级)。LED 显示灯将会依据以下特定模式亮起。

(3级)

	1	2	3
强	○	○	●
中	○	●	○
柔	●	○	○

肩部位置

- 按下肩部位置按钮 [👤] 调整肩部滚轮位置 (共7段)。LED 显示灯将会依据以下特定模式亮起。

(7段)

	1	2	3	4	5	6	7
高	○	○	○	○	○	●	●
	○	○	○	●	●	●	○
	○	●	●	●	○	○	○
低	●	●	○	○	○	○	○

完整个人化按摩

- 所有的手动按摩程序都可搭配下列任一或所有按摩选项使用，提供更个人化的按摩设定。
- [👤] (揉捏、捶打、双重) + [👤] (全身、局部滚轮) + [👤] (上手臂) + (下手臂) + [👤] (臀部) + [👤] (脚部) + [👤] (温暖热敷)。

停止操作

- 按下安全中止按钮 [■] 立即中止所有按摩功能。
- 按下复位按钮 [↺] 立即中止或重新设置按摩程序。按摩滚轮将会回复至起始位置。
- 关闭位于 uDeluxe Max 椅背后下方的总电源开关。

按摩功能及选项

开始按摩程序

- 开启位于 uDeluxe Max 后方的总电源开关。

终止按摩程序

- 按下位于遥控器上的安全中止按钮 [■]，再按下复位按钮 [↺]。滚轮将返回至起始位置，所有气囊将放气，结束按摩。

关闭 uDeluxe Max

- 按下复位按钮 [↺] 将滚轮返回至起始位置，再关闭总电源开关。

注意

- 若发生故障或紧急事件，按下安全中止按钮 [■]（请参考第6页）立即中止按摩程序。

使用 uDeluxe Max 后

- 使用后请将椅背返回至直立状态，并将足部按摩架收纳。




小心

- 当足部按摩架进行收纳动作时，请不要完全伸展您的双腿，避免碰触地面造成磨损。



下臂气囊按摩器

- 将下臂气囊按摩器往下推，直到下臂气囊按摩器返回到起始位置。

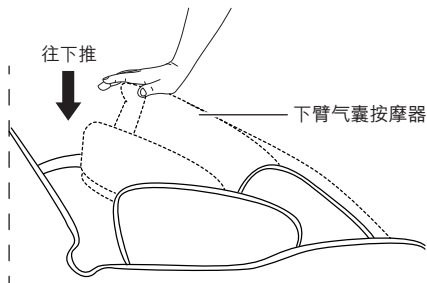

产品保养及收纳

按摩椅摆放位置及收纳方式

置放地点周遭的环境因素往往对产品的外观和内部机械装置产生极大影响。切勿将产品摆放于阳光直射或高温处，以及空调出风口所在，以免椅套材质发生干燥、龟裂及褪色等状况。

若长时间不使用产品，请将电源线插头由电源插座中拔除，并覆盖防尘罩。

定期以干布擦拭产品

清洁产品前请先确认总电源开关已关闭，电源线插头确实由电源插座中拔除。

一般而言，产品的椅套材质常接触到使用者身体所产生的天然油脂，所以清洁主体结构 and 椅套布料时，使用柔软干布擦拭即可。市面上 DIY 用品店可购得的超细纤维（micro-fiber）清洁用具或手套便是极佳选择。

请勿使用液状清洁剂清洁产品

本产品主要由电子零件和机械组件所构成，潮湿及水气皆会造成不良影响，因此需绝对避免产品接触水气或任何液态。若使用水（如湿布）清洁椅套材质，可能会损伤表面涂布并减其保护产品的功能。

若使用湿布清洁擦拭遥控器，可能会导致故障。

切勿使用清洁溶剂

无论在任何情况下皆不可使用清洁溶剂清洁产品，以免导致椅套材质褪色。

为避免损及椅套材质的品质，请勿使用一般家用洗衣机清洗椅套。

切勿自行修理产品

无论在何种情况下，请勿自行修理产品以免发生危险。若怀疑产品有故障的可能性，请拨打 OSIM 维修服务中心专线电话，寻求进一步协助和相关资讯。

故障排除

若在使用 uDeluxe Max 时遇到问题，请参考下列几点提示及可能解决方式。若 uDeluxe Max 仍处于故障状态或无法使用，请关掉电源，将电源线插头由插座中拔除并和 OSIM 维修服务中心* 联络。

使用者请勿自行拆卸或修理 uDeluxe Max。自行拆卸或维修而导致产品损坏将造成产品保固失效，OSIM 亦无责任担负该情况所造成的任何后果。

状况	可能原因/处理方式
● 滚轮与椅背衬垫发出摩擦杂音。 ● 操作中马达声响清晰可闻。 ● 进行捶打及揉捏按摩程序时发出巨大声响。	● 这些是由于 uDeluxe Max 机械构造所产生的杂音。 ● 这是正常运作时会发生此种状况，并非内部机件故障。
● 按摩进行突然中止，按摩滚轮返回至起始位置。	● 15分钟自动定时已完成。请再次按下任一个按摩程序按钮，重新启动按摩。 ● 不小心按下复位按钮 [↺]。 ● 为避免按摩椅因过热而导致意外，uDeluxe Max 装有过热重新启动保护装置。 ● 若是 uDeluxe Max 因过热而停止运作，并且无法重新启动，请关闭总电源开关并暂停操作30分钟，以避免于机件冷却后，按摩椅突然重新启动。
● 遥控器无法正常操作。	● 请检查电源线插头，并确认确实插入插座。 ● 请检查按摩椅后方线路是否连接妥当。 ● 请确认电源总开关是在「开启」状态。
● 电线和电源线插头异常过热。	● 请立即停止使用并与 OSIM 维修服务中心联络。
● 按摩在进行当中忽然停止操作。	● 15分钟自动定时已完成。请再次按下任一个按摩程序按钮，重新启动按摩。 ● 不小心按下安全中止按钮 [■] 或复位按钮 [↺]。 ● 关闭位于按摩椅后方的总电源开关。5秒后再开启。 ● 如果仍然出现同样问题，请关闭总开关电源，将电源线插头由插座中拔除，与 OSIM 维修服务中心联络。

故障排除

状况	可能原因/处理方式
无法启动 uDeluxe Max。	- 请确认电源总开关与电源线插头开关是在「开启」状态。 - 请确认电源线插头确实插入插座中。 - 请检查电源插座的输出瓦数是否正确。
足部按摩架无法操作。	- 请确认脚部按摩功能已被启动。 - 请确认足部按摩架已延伸。 - 请检查电源线插头，并确认确实插入插座。若仍然无法操作，请与 OSIM 维修服务中心联络。
按摩进行中，按摩滚轮停止操作。	- 按摩速度缓慢时过度施加压力会导致按摩滚轮机件结构负荷过大。 - 请勿施加过多的压力在按摩滚轮上。
椅背和足部按摩架无法调升 / 调降或是收纳 / 延伸。	确认椅背后方或足部按摩架下方没有任何物体以避免防压安全功能被启动。
遥控器发出哔哔声。	请关闭总电源开关，5秒钟后再开启电源。
肩部位置自动检测不成功。	- 当在自动检测期间，请保持身体在椅座最深的位置，同时保持头部在头枕上。 - 再次使用自动检测或手动调整肩部位置。
椅背下降时，椅背按摩停止操作。	为了安全起见，当调整椅背仰躺角度时，椅背按摩会停止运作。
若遇到上列以外的问题，或仍处于故障状态或无法使用。	关闭位于按摩椅后方的总电源开关，将电源线插头由插座中拔除并和 OSIM 维修服务中心* 联络。

* 有关维修服务中心所在地点，请浏览 www.OSIM.com。
产品保证书仅有效于其购买国家。

规格说明

产品名称	OSIM uDeluxe Max 按摩椅（傲胜大天王 Max）
产品型号	OS-8210
额定电压	220-240伏特~ 50 / 60赫兹（180瓦特） 110伏特~ 60赫兹（180瓦特） 220伏特~ 50赫兹（370瓦特）（稳定工作状态下最大功率） （请确保电压（交流电）确实符合产品规格需求）
自动定时	15分钟
尺寸	
椅背直立	122（长）x 74（宽）x 115（高）厘米
椅背后仰	179（长）x 74（宽）x 90（高）厘米
重量	
毛重	约99公斤
净重	约81公斤
重量（只限于中国）	
毛重	约106公斤
净重	约81公斤

记录

记录

OS-8210 uDeluxe Max

感謝您購買 OSIM uDeluxe Max。使用前請仔細閱讀操作手冊，並特別注意安全事項，以便正確操作和使用本產品。

本手冊提供使用者安全及有效的操作方式，請在閱畢後妥為收藏，以便日後參考查詢。

目錄	安全事項	2
	配件名稱與功能	5
	產品特性	7
	使用前準備	8
	按摩功能及選項	14
	產品保養及收納	19
	故障排除	20
	規格說明	22

重要安全事項說明

使用本產品時，請特別注意並遵守下列安全事項：

使用本產品前，請先詳閱所有的說明。

危險 — 為降低觸電風險，請遵照下列指示：

使用完畢後或清潔前，請將電源線插頭/USB電纜線由插座中拔除。

警告 — 為降低走火、灼傷、觸電、或是造成他人受傷的風險，請遵照下列指示：

- 1) 請務必依照使用手冊中所敘述的用途使用本產品。請勿使用非製造商所推薦的零配件。
- 2) 請勿在無人看管下將產品插入電源。在不使用電源時，請拔下電源插頭。
- 3) 請勿在毯子或枕頭下操作本產品。過熱可能會造成火災、觸電或人員受傷。
- 4) 如果電源鬆動，請勿使用本產品。
- 5) 請勿用濕手將電源插頭/USB電纜線與電源插座/電源連接或斷開。
- 6) 斷開電源插頭/USB電纜線時，按住插頭/USB電纜線 (而不是電源線/電纜線) 將其拔出。
- 7) 如果產品有損壞的電源線或插頭/USB電纜線、故障、電源故障或掉入水中，請勿操作本產品。意外恢復電源時，可能會造成傷害。將產品退回 OSIM 服務中心進行檢查和維修。
- 8) 如果電源插頭/USB電纜線或電源線損壞，必須由 OSIM 服務中心或其授權服務代理更換。
- 9) 請勿拖拉電源線/USB電纜線來移動產品或是將電源線/USB電纜線當作握把使用。
- 10) 電源線務必和加熱表面保持安全距離。
- 11) 請勿將電源線/USB電纜線放在產品或任何其他重物下。
- 12) 請勿將電源線/USB電纜線纏繞於產品上。
- 13) 請勿在出氣口阻塞的狀況下操作本產品。請保持出氣口通暢，避免被棉屑，毛髮等物阻塞。
- 14) 不慎將液體傾倒在產品上時，請立即將電源線插頭/USB電纜線自插座中拔除，以免導致觸電。
- 15) 請勿在使用噴霧產品時或於氧氣不足的場所操作本產品。
- 16) 欲切斷電源，請將所有的操作控制關閉後，將電源線插頭由電源插座中拔除。
- 17) 請勿將任何物體或易燃材料掉落或插入產品的任何開口中。這可能會導致觸電、故障或火災風險。
- 18) 請務必確認孩童未將本產品視為遊樂器材使用，以確保其安全。
- 19) 對於 8 歲以上 (含) 的兒童和身體、感官或精神上有缺陷或缺乏經驗與知識的人員，倘若有負責其安全的人員監護或接受過監護人有關電器使用的指導並已瞭解到可能的危險，則可以使用本電器。
- 20) 兒童不得進行產品清洗或維護。
- 21) 當身體或手濕時，請勿使用或操作本產品。
- 22) 請勿在室外使用本產品。
- 23) 請勿在過度潮濕或灰塵密集的環境下使用產品，以免導致機件故障。

- 24) 請勿在室溫超過攝氏 40 度之處使用產品。
- 25) 請勿將產品置於電熱器旁、爐具附近或陽光直射處。
- 26) 操作過程中不要蓋住產品。這可能導致馬達溫度升高以及隨後的故障或火災。
- 27) 雷電情形發生時請勿使用產品。
- 28) 在偏低室溫中使用產品，切勿驟然調升溫度。建議將溫度逐步調至正常範圍後再使用。
- 29) 若是將產品由低溫的儲存處移至溫暖環境使用時，可能會因為機件內水氣聚集而影響機器正常運作，造成機件故障。建議移動後，先將產品在正常室溫放置 1 小時後再開始使用。
- 30) 首次使用本產品時，請小心。請先選擇低強度並於短時間內進行測試，以瞭解不同模式的運作方式和您喜歡的強度。
- 31) 如果首次使用本產品，請務必選擇柔和的按摩程式。
- 32) 在按摩進行中，若是腳不小心由足部按摩器中滑落出去，切勿用力將腳擠回足部按摩器，以免造成傷害及機件故障。
- 33) 不可站在本產品上，必須坐在座位上才能使用本產品。
- 34) 將產品放在平坦的防滑地板上使用。
- 35) 如果產品的布套破損且內部機件外露，請勿使用本產品。
- 36) 請勿自行拆卸或維修產品。碰觸內部機件可能導致機件故障或觸電意外。
- 37) 請勿拆卸、掉落或使產品受到衝擊或振動。
- 38) 為避免按摩效果減低或造成傷害，請勿將產品與其它具有療效之設備或電毯等同時使用。
- 39) 請勿將重物堆放於扶手、足部按摩器或椅背上，以免造成意外傷害或是機件故障。
- 40) 產品僅能由 OSIM 服務中心維修。消費者請勿自行嘗試拆卸或維修。
- 41) 由於產品結構關係，使用中會聽到一些聲音，屬於正常情況。
- 42) 請勿在飲酒後或身體感到任何不適時使用產品。
- 43) 按摩時若身體感到任何不適，請立即停止操作。身體產生不正常或嚴重疼痛時，請尋求醫療諮詢。
- 44) 產品在啟動時會產生熱度。對熱不敏感的人使用本產品時必須小心謹慎。
- 45) 本產品非作為自我診斷或治療之用，如需要診斷或治療時，應由專業醫療人員處理。
- 46) 如果您正接受任何藥物治療或屬於以下任何類別（但不限於），請在使用前尋求醫療諮詢。
 - 心臟病
 - 高血壓或低血壓、深層靜脈栓塞
 - 懷孕
 - 糖尿病
 - 體內植入了醫療器械（例如心律調節器，自動心臟去顫器）
 - 最近動過手術
 - 患有任何骨骼疾病，如骨折、骨質疏鬆
- 47) 使用按摩器時，不要對頸部、背部施加過大的力。
- 48) 請勿使用未覆蓋椅套或椅墊的按摩椅，以避免造成傷害或導致機件故障。
- 49) 為了達到最佳效果，每個自動按摩程式的特設時長為 15 至 30 分鐘。長時間連續使用可能會觸發過熱保護裝置，因此再次使用前，請確保產品休息 10 分鐘。

- 50) 定期按摩有助於身心健康。請適度的按摩，以避免過度刺激。保持均衡的按摩習慣，才能充分體驗按摩帶來的益處。
- 51) 操作時請勿將手或腳插入按摩滾輪移動的途徑內，以避免發生意外傷害。


請妥善保管此份安全事項說明書

本產品僅適於家用

如果產品用於商業目的，保固將被取消

配件名稱與功能

按摩椅

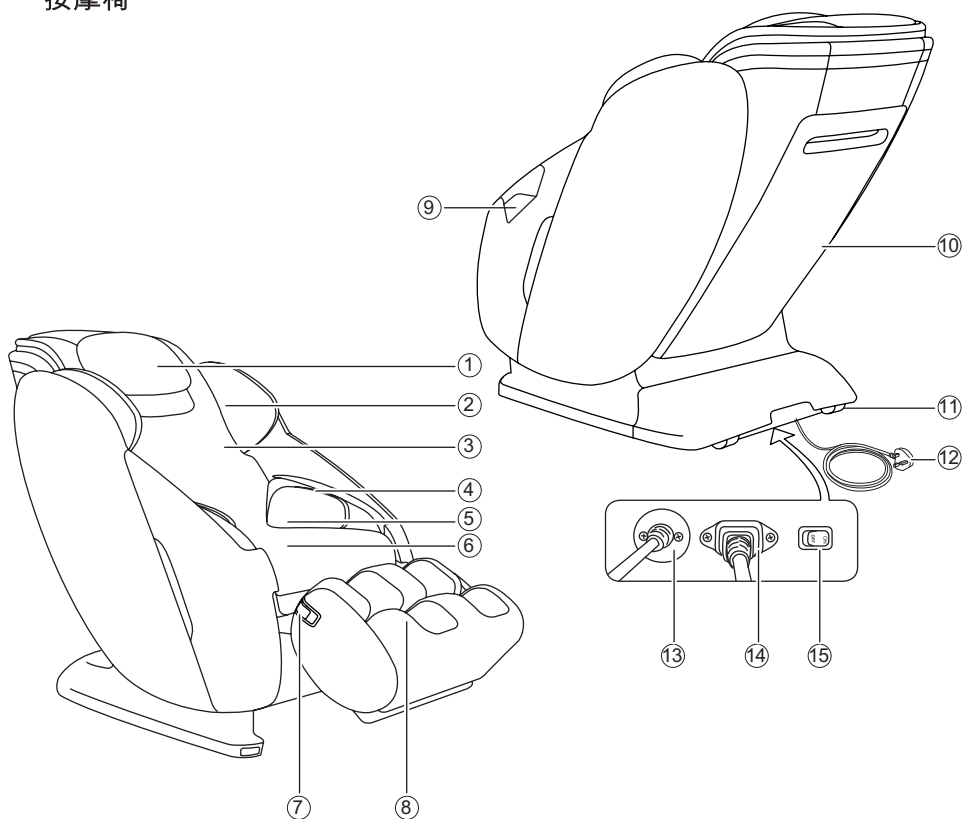

*產品圖片僅供說明用途，並不按比例繪製。

1. 頭枕
2. 上臂氣囊按摩器
3. 椅背襯墊
4. 下臂氣囊按摩器
5. 臀部氣囊按摩器
6. 椅座
7. 擱腳凳拉桿
8. 足部按摩器

9. 遙控器口袋
10. 椅背外殼
11. 腳輪
12. 電源線與電源線插頭*
13. 遙控器輸入插孔
14. 電源輸入插孔
15. 總電源開關

*電源線插頭及開關的樣式將根據國家的要求而有所不同。

配件名稱與功能

遙控器

復位按鈕

立即終止所有操作。
按摩滾輪將返回起始位置。

自動按摩程式按鈕

詳細說明請參考本手冊第14頁。

手臂氣囊按摩

同時啟動上下手臂氣囊。

3D 滾輪按摩調整按鈕

用以調整 3D 滾輪按摩強度。詳細說明請參考本手冊第17頁。

足部按摩器調節按鈕

延伸或收納足部按摩器至理想高度或長度。

自選按摩程式按鈕

詳細說明請參考本手冊第15頁。

滾輪寬度調節按鈕

調整按摩滾輪寬度（寬、中、窄）。

全身／局部滾輪按摩調整按鈕

用以調整全身或局部滾輪按摩。

待機 LED 顯示燈

進入待機模式後，LED 會亮起。
詳情說明請參考本手冊第7頁。

安全中止按鈕

立即中止所有操作。

溫暖熱敷關閉

啟動以及關閉溫暖熱敷。

臀部氣囊按摩

啟動臀部氣囊按摩。

椅背傾斜調節按鈕

調升或調降椅背傾斜角度。

起始位置按鈕

椅背與足部按摩器調整至起始位置。

腳部按摩程式按鈕

啟動小腿和／或足部按摩。

肩部位置調整按鈕

詳細說明請參考本手冊第17頁。

按摩滾輪位置調節按鈕

使用自選按摩程式時，用以調整滾輪位置。

捶打按摩調整按鈕

使用自選按摩程式時，用以調整捶打按摩速度（高速、慢速）。



小心

- 請勿坐、踩或將重物堆放在遙控器上面。
- 避免掉落遙控器。不使用遙控器時，建議將它放進遙控器側邊收納袋中。
- 請勿施以不當壓力於遙控器。
- 雙手潮濕時，請勿操作遙控器。
- 請勿用鋒利或堅硬的物體操作遙控器，以免造成機件故障。

產品特性

全身按摩

- 智慧又精準的全身按摩，具有6滾輪式的 3D 深層按摩系統，氣壓按摩與揉捏按摩
- 肩部位置自動檢測功能讓您享有更加個人化的按摩
- 可調整氣壓按摩在您的臀部、上肩和下肩（強、柔）
- 可調整 3D 滾輪位置
 - 3D 肩部（共5級）
 - 3D 腰部（共5級）
 - 3D 臀部（共3級）
- 滾輪寬度調整（寬、中、窄）
- 自選按摩時可調整滾輪位置
- 以強而有力的包覆式腳部按摩，按摩您的小腿和足部

自動按摩與自選按摩程式

- 8種自動按摩程式
 - 頸肩舒緩、腰臀舒緩、全身舒壓、活力恢復、全身伸展、夜間助眠、董事長和貴婦美體
- 可調整自選按摩
 - 揉捏、捶打、雙重與滾輪（全身／局部）按摩
 - 上臂、下臂與臀部氣壓按摩
 - 小腿和足部包覆式按摩

按摩椅位置

- 收納式足部按摩器，節省居家空間
- 多重用途的足部按摩器可作為擱腳凳使用
- 只要輕輕一按遙控器，便可輕鬆將足部按摩器和椅背返回至起始位置

其它特性

- 15分鐘自動定時
- 易於操作的遙控器選擇項目及調整按摩程式
- 位於按摩椅後方的腳輪，方便移動


待機 LED 指示燈的定義

- 當待機 LED 指示燈亮起時，代表產品已經進入了待機模式，此產品的待機功率小於 0.8W。這個符號 [] 是在提醒用戶在不使用時拔掉電源插頭，保障安全和節能。


使用前準備

安裝 uDeluxe Max

- uDeluxe Max 是以椅背後仰狀態的方式包裝。
- 如圖所示，使用前請確保椅背調升至直立狀態。

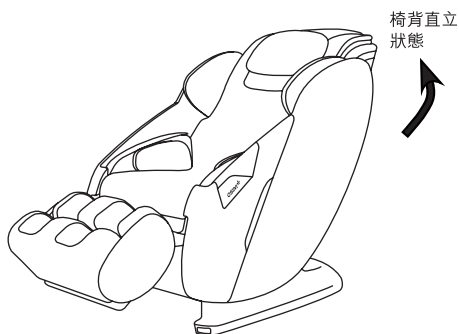


- 如圖所示，對齊頭枕上的拉鍊后，將拉鍊拉上。

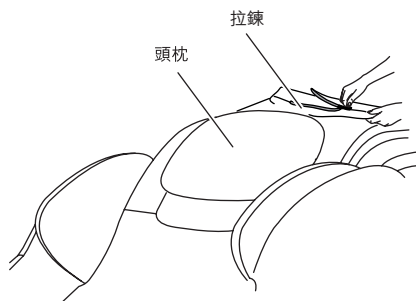

- 請勿拆除椅背襯墊。

放置頭枕


- 將枕墊鬆散的部份平整放置在頭枕帶下方並如圖所示，翻轉頭枕。

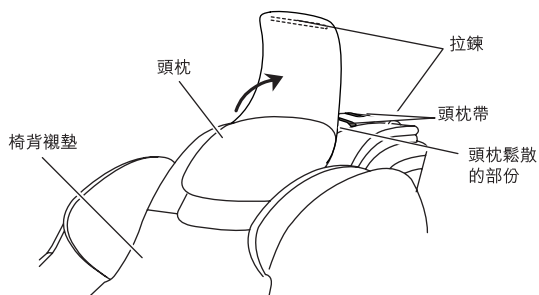

使用前準備

放置 uDeluxe Max

- 操作前請先確定在 uDeluxe Max 後方有70公分，前方有80公分以上的空間（如圖所示），以便在使用中能夠將 uDeluxe Max 椅背安全後仰及延伸足部按摩器。
- 為避免訊號干擾，uDeluxe Max 必須與電視、收音機等影音設備保持1米以上的距離。

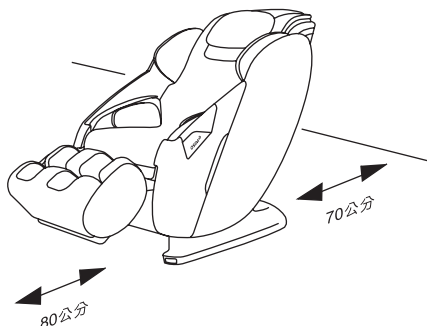


- 由於 uDeluxe Max 甚為沉重，放置時請務必小心，以避免損壞地板表面。
- 建議在 uDeluxe Max 下方墊上地毯，以防地面刮傷並降低使用中的噪音。

開啟電源

- 將電源線插入 uDeluxe Max 電源輸入插孔。
- 將電源線插頭插入電源插座。
- 開啟或關閉位於 uDeluxe Max 後方的總電源開關。

遙控器輸入插孔

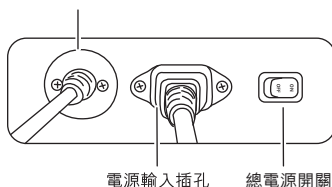

小心

- 在插上電源線插頭之前，請先確認所有的開關（包括總電源開關）都在「關」的狀態。

注意

- 若按摩操作終止時，椅背滾輪停留在椅背中央，則再次開啟總電源後，滾輪即會返回到起始位置。

使用前準備

移動 uDeluxe Max


uDeluxe Max 附有腳輪，以方便移動。

在移動 uDeluxe Max 之前：

- 將椅背調升至完全直立狀態，並將足部按摩器收納。
- 關閉總電源開關並將電源線插頭由插座中拔除。


移動方式 (1)

- 如圖所示，抬起 uDeluxe Max 前方兩側並使用腳輪推動至理想位置。

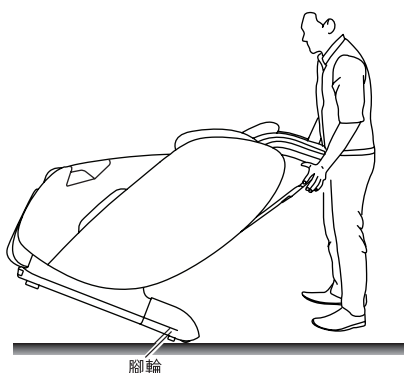

移動方式 (2)

- 如圖所示，抬起後搬動 uDeluxe Max。

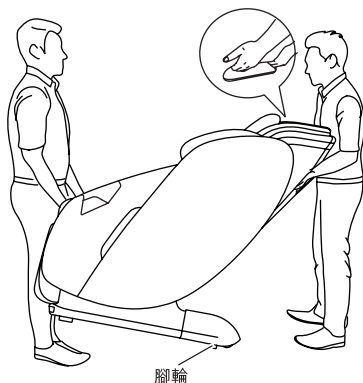


⚠ 小心

- 有人坐在按摩椅中時，請勿移動 uDeluxe Max。這可能將 uDeluxe Max 翻倒造成事故和傷害。

調整下臂氣囊按摩器

- 如圖所示，將兩側的下臂氣囊按摩器拉出。

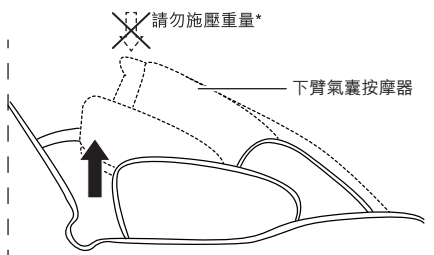

⚠ 小心



- 請勿在按摩下臂時在下臂氣囊按摩器上施壓重量，瞬間的重量可能會造成傷害。

使用前準備


足部按摩器／攔腳凳功能

足部按摩器可轉變成攔腳凳。


- 延伸足部按摩器直到完全從椅座底部伸出。
- 輕微推下足部按摩器後，持續拉起攔腳凳拉桿，如圖所示轉向指定的方位，旋轉攔腳凳。

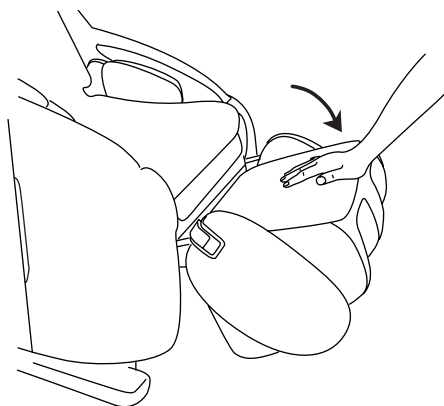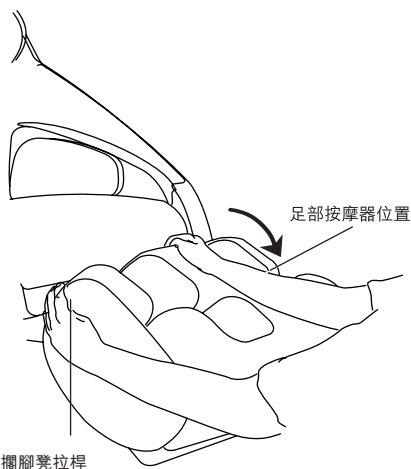

- 將攔腳凳旋轉直到聽到進入定位的「喀」聲為止。
- 鬆開拉桿以固定攔腳凳位置。

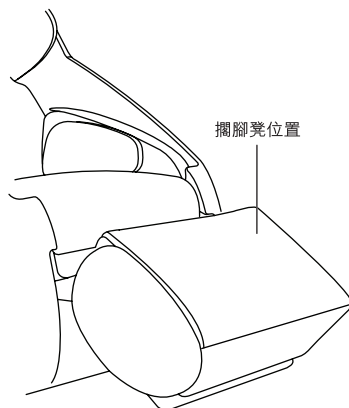

- 輕微拉上攔腳凳再拉起攔腳凳拉桿，如圖所示轉向指定的方位旋轉回足部按摩器位置。

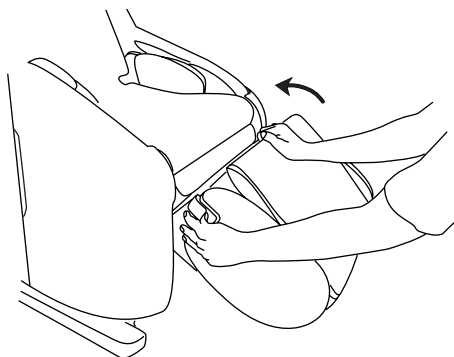

注意

- 足部按摩器位置或攔腳凳位置都可收納按摩椅內。
- 在操作時，請不要旋轉足部按摩器。

使用前準備

調整椅背傾斜角度

調升椅背

- 持續按住椅背上升按鈕 [

調降椅背

- 持續按住椅背下降按鈕 [

調整足部按摩器

延伸足部按摩器

- 持續按住足部按摩器延伸按鈕 [

收納足部按摩器

- 持續按住足部按摩器收納按鈕 [

起始位置

- 持續按住遙控器上的起始位置按鈕 [



- 當調整椅背與足部按摩器時，請確保足部按摩器／椅座附近或下方沒有任何物件；兒童或寵物請勿靠近，以免受傷。
- 當足部按摩器調升時，請勿坐於其上。瞬間在足部按摩器上施壓重量，將導致機件受損，甚至造成 uDeluxe Max 傾覆而釀成意外或受傷。
- 坐進 uDeluxe Max 前，請先確認椅背已經豎直，坐入后再依個人喜好調整仰躺角度。
- 請勿將手或異物放入椅座和椅背與足部按摩器之間縫隙。


注意

- 按摩滾輪停止移動後，才能啟動椅背上升或下降。


使用前準備

若發生電源故障

- 用手臂支撐按摩椅兩側扶手，輕移臀部至椅座邊緣。

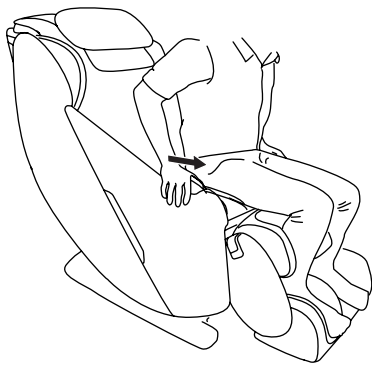

- 抬高您的膝蓋即可輕易移出。

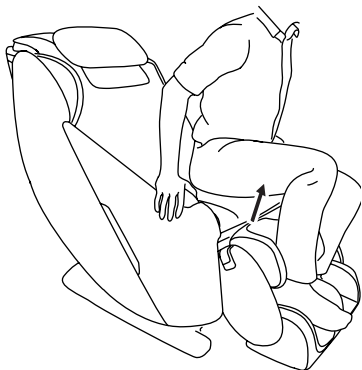


- 若發生電源故障，請關掉總電源開關並拔掉電源線插頭，以免按摩椅在電源突然恢復的情形下重新操作起來。

按摩功能及選項

自動按摩程式

- 調整椅背至理想角度，和足部按摩器至理想高度或長度。
- 通過以下順序選擇8種自動按摩程式，符合您不同的按摩需求。

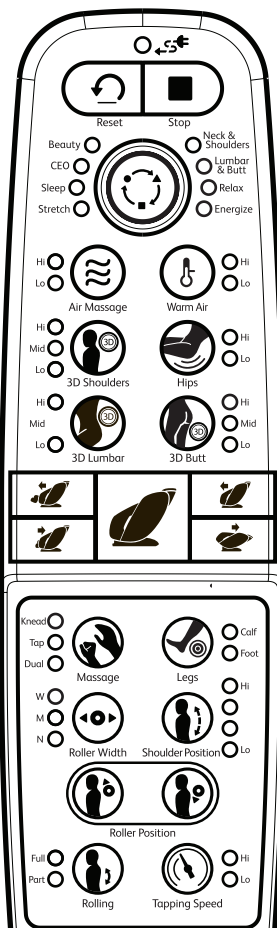

1 任意選擇下列8種自動按摩程式：

- 頸肩舒緩
- 腰臀舒緩
- 全身舒展
- 活力恢復
- 貴婦美體
- 董事長
- 夜間助眠
- 全身伸展

一旦按下自動按摩程式選項按鈕，被選取的按摩程式 LED 顯示燈便會亮起。

2 肩部位置將自動檢測。您也可依個人喜好，按下肩部位置按鈕 [1] 自選調整肩部滾輪位置（7段，請參考第17頁）。

3 被選取的自動按摩程式將開始按摩。

4 按下氣壓按摩按鈕 [2] 或 [3] 調整上手臂、下手臂和臀部氣壓按摩強度或關閉其功能。溫暖熱敷啟動鈕 [4]。關閉氣壓按摩後其 LED 顯示燈便不會亮起。

5 在原始的設定下，3D 肩部／3D 腰部及 3D 臀部功能將會設定在「中」強度。您可以依個人喜好，按下該部位的按鈕 [5]、[6] 或 [7] 調整至理想強度（請參考第17頁）。

6 在原始的設定下，小腿和足部按摩將會被啟動。按下腳部按鈕 [8] 關閉其功能。

7 按摩完成後，按摩滾輪即回到起始位置。


注意

- 選擇「全身伸展」自動按摩程式之前請確保調整椅背完全下降、足部按摩器完全延伸，避免擊中足部按摩器下方的任何物件。這可能會啟動安全功能而停止按摩程式的操作。

按摩功能及選項

自選按摩程式

- 調整椅背至理想角度，和足部按摩器至理想高度或長度。

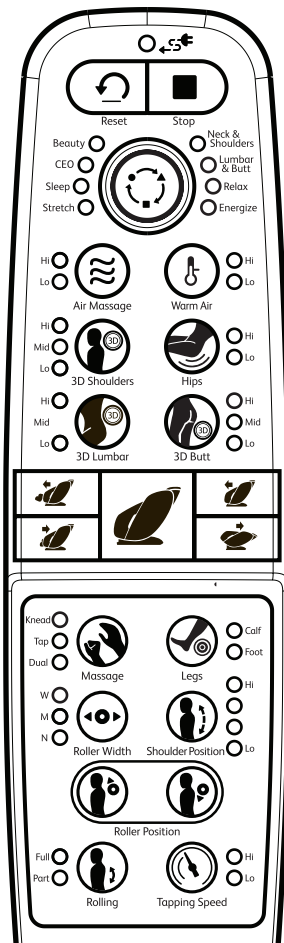

1 依個人喜好，由選單1至4中選取並組合各項自選按摩功能。一旦按下自選按摩程式選項按鈕，被選取的按摩程序 LED 顯示燈便會亮起。

2 選取選單1或2時，您也可依個人喜好，按下肩部位置按鈕 [] 自選調整肩部滾輪位置（7段，請參考第17頁）。

3 被選取的自選按摩程式將開始按摩。

4 選取選單1或2時，您可以依個人喜好，調整 3D 肩部／3D 腰部及 3D 臀部功能，按下該部位的按鈕 []、[] 或 [] 調整至理想強度（請參考第17頁）。

5 在按摩進行中，您可根據選定的自選按摩程式隨時調整滾輪寬度或是滾輪位置。

選單1

揉捏

模擬拇指揉捏的按摩手法和專業按摩治療師的旋轉揉壓技法。

- 按下按摩手法按鈕 [] 一次，「揉捏」LED 顯示燈將會亮起。
- 持續按住滾輪位置按鈕 [] / [] 調整滾輪位置。

捶打

敲擊的按摩動作，仿如經驗豐富的按摩師的雙拳。

- 按下按摩手法按鈕 [] 兩次，「捶打」LED 顯示燈將會亮起。
- 持續按住滾輪位置按鈕 [] / [] 調整滾輪位置。
- 按下滾輪寬度按鈕 [] 可調整按摩滾輪寬度（寬、中、窄）。
- 按下捶打速度按鈕 [] 可調整捶打速度（高速、低速）。

按摩功能及選項

自選按摩程式

選單1

雙重

結合捶打和揉捏技法。

- 按下按摩手法按鈕 [] 三次，「雙重」LED 顯示燈將會亮起。
- 持續按住滾輪位置按鈕 [] / [] 調整滾輪位置。
- 按下捶打速度按鈕 [] 可調整捶打速度（高速、低速）。

選單2

滾輪按摩

全身滾輪

按摩滾輪沿著背部上下移動。

局部滾輪

按摩滾輪針對局部上下移動。

- 按下滾輪按鈕 [] 選擇全身或局部滾輪按摩。相應的 LED 顯示燈將會亮起。

選單3

氣囊按摩

上下手臂氣囊按摩

- 按下 []，LED 顯示燈將會亮起。
- 再次按下氣囊按鈕可在強、柔或關閉模式之間轉換。

臀部氣壓按摩

- 按下臀部按鈕 []，LED 顯示燈將會亮起。
- 再次按下臀按鈕 [] 可在強、柔或關閉模式之間轉換。

選單4

腳部按摩

- 按下腳部按鈕 []，LED 顯示燈將會亮起。
- 再次按下腳部按鈕 [] 可在小腿、足部或關閉模式之間轉換。

按摩功能及選項

按摩調整

- 即可在按摩中自選調整 3D 滾輪強度和肩部位置。

肩部、腰部和臀部的 3D 滾輪位置

- 按下 3D 肩部按鈕 [] 或 3D 腰部按鈕 [] 調整滾輪按摩強度 (5級)。
LED 顯示燈將會依據以下特定模式亮起。

(5級)

	1	2	3	4	5
強	○	○	○	●	●
中	○	●	●	●	○
柔	●	●	○	○	○

- 按下 3D 臀部按鈕 [] 調整滾輪按摩強度 (3級)。LED 顯示燈將會依據以下特定模式亮起。

(3級)

	1	2	3
強	○	○	●
中	○	●	○
柔	●	○	○

肩部位置

- 按下肩部位置按鈕 [] 調整肩部滾輪位置 (共7段)。LED 顯示燈將會依據以下特定模式亮起。

(7段)

	1	2	3	4	5	6	7
高	○	○	○	○	○	●	●
	○	○	○	●	●	●	○
	○	●	●	●	○	○	○
低	●	●	○	○	○	○	○

完整個人化按摩

- 所有的手動按摩程式都可搭配下列任一或所有按摩選項使用，提供更個人化的按摩設定。
- [] (揉捏、捶打、雙重) + [] (全身、局部滾輪) + [] (上手臂) + (下手臂) + [] (臀部) + [] (腳部) + [] (溫暖熱敷) 。

停止操作

- 按下安全中止按鈕 [] 立即中止所有按摩功能。
- 按下復位按鈕 [] 立即中止或重新設置按摩程式。按摩滾輪將會回復至起始位置。
- 關閉位於 uDeluxe Max 椅背後下方的總電源開關。

按摩功能及選項

開始按摩程式

- 開啟位於 uDeluxe Max 後方的總電源開關。
- 使用後請將椅背返回至直立狀態，並將足部按摩器收納。

終止按摩程式

- 按下位於遙控器上的安全中止按鈕 [■]，再按下復位按鈕 [↺]。滾輪將返回至起始位置，所有氣囊將放氣，結束按摩。
- 當足部按摩器進行收納動作時，請不要完全伸展您的雙腿，避免碰觸地面造成磨損。

關閉 uDeluxe Max

- 按下復位按鈕 [↺] 將滾輪返回至起始位置，再關閉總電源開關。

注意


- 若發生故障或緊急事件，按下安全中止按鈕 [■]（請參考第6頁）立即中止按摩程式。

使用 uDeluxe Max 後




小心

- 當足部按摩器進行收納動作時，請不要完全伸展您的雙腿，避免碰觸地面造成磨損。

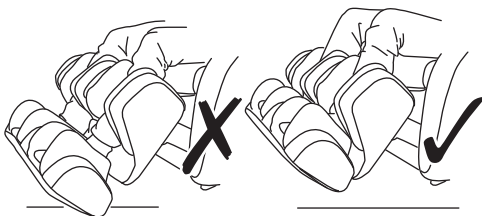

下臂氣囊按摩器

- 將下臂氣囊按摩器往下推，直到下臂氣囊按摩器返回到起始位置。

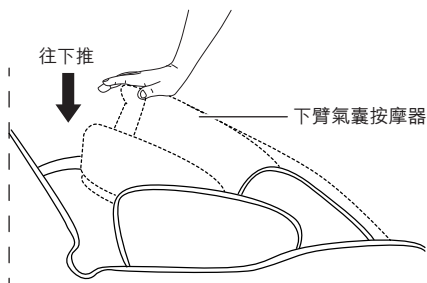

產品保養及收納

按摩椅擺放位置及收納方式

置放地點周遭的環境因素往往對產品的外觀和內部機械裝置產生極大影響。切勿將產品擺放於陽光直射或高溫處，以及空調出風口所在，以免椅套材質發生乾燥、龜裂及褪色等狀況。

若長時間不使用產品，請將電源線插頭由電源插座中拔除，並覆蓋防塵罩。

定期以乾布擦拭產品

清潔產品前請先確認總電源開關已關閉，電源線插頭確實由電源插座中拔除。

一般而言，產品的椅套材質常接觸到使用者身體所產生的天然油脂，所以清潔主體結構和椅套布料時，使用柔軟乾布擦拭即可。市面上 DIY 用品店可購得的超細纖維（micro-fiber）清潔用具或手套便是極佳選擇。

請勿使用液狀清潔劑清潔產品

本產品主要由電子零件和機械組件所構成，潮濕及水氣皆會造成不良影響，因此需絕對避免產品接觸水氣或任何液態。若使用水（如濕布）清潔椅套材質，可能會損傷表面塗佈並減其保護產品的功能。

若使用濕布清潔擦拭遙控器，可能會導致故障。

切勿使用清潔溶劑

無論在任何情況下皆不可使用清潔溶劑清潔產品，以免導致椅套材質褪色。

為避免損及椅套材質的品質，請勿使用一般家用洗衣機清洗椅套。

切勿自行修理產品

無論在何種情況下，請勿自行修理產品以免發生危險。若懷疑產品有故障的可能性，請撥打 OSIM 維修服務中心專線電話，尋求進一步協助和相關資訊。

故障排除

若在使用 uDeluxe Max 時遇到問題，請參考下列幾點提示及可能解決方式。若 uDeluxe Max 仍處於故障狀態或無法使用，請關掉電源，將電源線插頭由插座中拔除並和 OSIM 維修服務中心*聯絡。

使用者請勿自行拆卸或修理 uDeluxe Max。自行拆卸或維修而導致產品損壞將造成產品保固失效，OSIM 亦無責任擔負該情況所造成的任何後果。

狀況	可能原因/處理方式
● 滾輪與椅背襯墊發出摩擦雜音。 ● 操作中馬達聲響清晰可聞。 ● 進行捶打及揉捏按摩程式時發出巨大聲響。	● 這些是由於 uDeluxe Max 機械構造所產生的雜音。 ● 這是正常運作時會發生此種狀況，並非內部機件故障。
● 按摩進行突然中止，按摩滾輪返回至起始位置。	● 15分鐘自動定時已完成。請再次按下任一個按摩程式按鈕，重新啟動按摩。 ● 不小心按下復位按鈕 [↺]。 ● 為避免按摩椅因過熱而導致意外，uDeluxe Max 裝有過熱重新啟動保護裝置。 ● 若是 uDeluxe Max 因過熱而停止運作，並且無法重新啟動，請關閉總電源開關並暫停操作30分鐘，以避免於機件冷卻後，按摩椅突然重新啟動。
● 遙控器無法正常操作。	● 請檢查電源線插頭，並確認確實插入插座。 ● 請檢查按摩椅後方線路是否連接妥當。 ● 請確認電源總開關是在「開啟」狀態。
● 電源線和電源線插頭異常過熱。	● 請立即停止使用並與 OSIM 維修服務中心聯絡。
● 按摩在進行當中忽然停止操作。	● 15分鐘自動定時已完成。請再次按下任一個按摩程式按鈕，重新啟動按摩。 ● 不小心按下安全中止按鈕 [■] 或復位按鈕 [↺]。 ● 關閉位於按摩椅後方的總電源開關。5秒後再開啟。 ● 如果仍然出現同樣訊息，請關閉總開關電源，將電源線插頭由插座中拔除，與 OSIM 維修服務中心聯絡。

故障排除

狀況	可能原因/處理方式
無法啟動 uDeluxe Max。	- 請確認電源總開關與電源綫插頭開關是在「開啟」狀態。 - 請確認電源綫插頭確實插入插座中。 - 請檢查電源插座的輸出瓦數是否正確。
足部按摩器無法操作。	- 請確認腳部按摩功能已被啟動。 - 請確認足部按摩器已延伸。 - 請檢查電源綫插頭，並確認確實插入插座。若仍然無法操作，請與 OSIM 維修服務中心聯絡。
按摩進行中，按摩滾輪停止操作。	- 按摩速度緩慢時過度施加壓力會導致按摩滾輪機件結構負荷過大。 - 請勿施加過多的壓力在按摩滾輪上。
椅背和足部按摩器無法調升／調降或是收納／延伸。	確認椅背後方或足部按摩器下方沒有任何物體以避免防壓安全功能被啟動。
遙控器發出嗶嗶聲。	請關閉總電源開關，5秒鐘後再開啟電源。
肩部位置自動檢測不成功。	- 當在自動檢測期間，請保持身體在椅座最深的位置，同時保持頭部在頭枕上。 - 再次使用自動檢測或自選調整肩部位置。
椅背下降時，椅背按摩停止操作。	為了安全起見，當調整椅背仰躺角度時，椅背按摩會停止運作。
若遇到上列以外的問題，或仍處於故障狀態或無法使用。	關閉位於按摩椅後方的總電源開關，將電源綫插頭由插座中拔除並和 OSIM 維修服務中心* 聯絡。

*有關維修服務中心所在地點，請瀏覽 www.OSIM.com。
產品保固服務證書僅有效於其購買國家。

規格說明

產品名稱	OSIM uDeluxe Max
產品型號	OS-8210
額定電壓	220-240伏特~ 50／60赫茲（180瓦特） 110伏特~ 60赫茲（180瓦特）（台灣地區） 220伏特~ 50赫茲（370瓦特） （請確保電壓（交流電）確實符合產品規格需求）
自動定時	15分鐘
尺寸	
椅背直立	122（長）x 74（寬）x 115（高）公分
椅背后仰	179（長）x 74（寬）x 90（高）公分
重量	
毛重	約99公斤
淨重	約81公斤

限用物質及其化學符號

設備名稱：按摩椅 Equipment Name			型號（型式）：OS-8210 Type designation (Type)			
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁺⁶)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電路板	○	○	○	○	○	○
電動機	○	○	○	○	○	○
開關	-	○	-	○	○	○
電源線	○	○	○	○	○	○
外殼	○	○	○	○	○	○
備考 1. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 1. “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.						
備考 2. “—” 係指該項限用物質為排除項目。 Note 2. The “—” indicates that the restricted substance corresponds to the exemption.						

記錄



Designed & Developed in Singapore by OSIM International Pte. Ltd.
© 2021 All rights reserved. www.OSIM.com
OSIM is Subsidiary of V3 Brands