
uGun Mini

OS-2253 Operation Manual

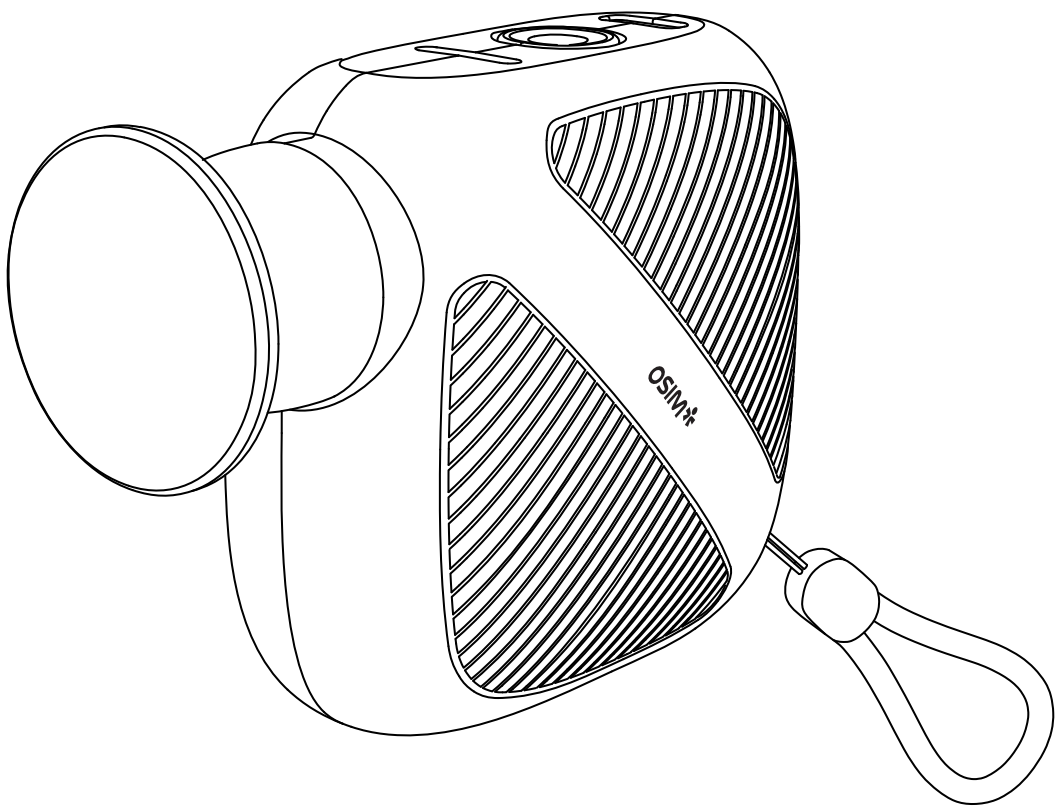

OSIM
Inspiring well-being

Rev D

1) English

2) Simplified Chinese 简体中文

3) Traditional Chinese 繁體中文

4) Specification 规格说明

OS-2253 uGun Mini

ENGLISH

Thank you for purchasing the OSIM uGun Mini. Please read this operation manual thoroughly for the correct methods of usage, especially taking note of the section on safety.

This manual should be kept on hand for easy reference. It is your guide to a safe and efficient operation.

Contents

Safety	2
Names of parts and functions	7
Operation	9
Product care and storage	13
Troubleshooting	15

IMPORTANT SAFETY INSTRUCTIONS

When using the product, please take special notice of the following basic precautions:
Read all instructions before using this product.

DANGER – To reduce the risk of electric shock:

Always unplug this product from the electrical outlet immediately after use and before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1) Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
2) The product should never be left unattended when plugged in. Unplug from electrical outlet /power source when the product is not in use, and before putting on or taking off parts.
3) Do not operate the product under a blanket or pillow. Excessive heating may occur and cause fire, burns, electric shock, or injury to persons.
4) Do not use the product if the electrical outlet /power source is loose.
5) Do not connect or disconnect the power plug /USB cable from the electrical outlet /power source with wet hands.
6) When disconnecting the power plug /USB cable, remove it by holding the plug /USB cable head, and not by the cord / cable.
7) Do not operate the product if it has a damaged cord or plug /USB cable, a malfunction, a power failure, or it is dropped into the water. Injury may occur when power is restored unexpectedly. Return the product to OSIM Service Centre for examination and repair.
8) If the power plug /USB cable or power cord is damaged, it must be replaced by OSIM Service Centre or its authorized service agents.
9) Do not carry this product by the power cord /USB cable or use the power cord /USB cable as a handle.

10) Keep the product power cord /USB cable away from heated surfaces.
11) Do not place the power cord /USB cable under the product or any other heavy objects.
12) Do not wind the power cord /USB cable around the product.
13) Do not operate the product with the air openings blocked. Keep the air openings free of lint, hair, and the like.
14) Remove power plug /USB cable from the electrical outlet / power source immediately should liquid be spilled onto the product as this may result in electric shock.
15) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
16) To stop using the product, turn off all controls and remove the power plug /USB cable from the electrical outlet /power source.
17) Do not drop or insert any object or flammable material into any openings of the product. This may result in electric shock, malfunction, or risk of fire.
18) Children should be supervised to ensure that they do not play with the product.
19) This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Keep children away when the product is in operation.
20) Cleaning and user maintenance of the product shall not be made by children.
21) Do not use or operate the product when your body or hands are wet.
22) Do not use this product outdoors.
23) Do not use the product in an excessively humid or dusty environment as it may result in malfunction.
24) Do not use the product in a damp, poorly ventilated, or high-temperature environment.
25) Do not expose the product to heaters, stoves or direct sunlight.

26) Do not cover the product during operation. This may result in a rise in motor temperature and subsequent malfunction or fire.
27) If you should use the product in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
28) If the product is brought into a warm environment from a cold place where it was stored, wait for an hour before use as there may be water droplets on mechanical parts due to condensation. Using the product under such condition may result in malfunction.
29) Do not dismantle, drop, or subject the product to shock or vibration.
30) Do not rest or place heavy objects on the product as this may result in malfunction.
31) Some noise may be heard from the product while in use. This is due to the structure of the product and is normal.
32) Do not use the product in combination with other therapeutic equipment or electric blanket, etc., as this may result in ineffectiveness or injury.
33) Do not fall asleep when using the product.
34) When using the product for the first time, start with a gentle massage program and low intensity for a short period to understand the features and determine your preferred intensity.
35) Please do not use the product if you are not feeling well or under the influence of alcohol.
36) Each auto massage program is designed to last 15 minutes for optimal effectiveness. Ensure that the product rests for 10 minutes before it is being used again as continuous usage over a long period may activate the overheat protection device.
37) For best results, enjoy your massage regularly, while keeping in mind that moderation is key to avoid excessive stimulation and ensure a balanced experience.
38) Avoid food intake for at least an hour before massage / usage.


39) Stop using immediately should you experience discomfort and consult your doctor if you experience any abnormal or severe pain.
40) This product is not intended for self-diagnosis or self-treatment of conditions that should be managed by a qualified health care provider.
41) If you are under any medication or fall into any of the following categories (but not limited to), please consult your health care provider first before use:
    - Heart diseases
    - High, or low blood pressure, deep vein thrombosis (DVT)
    - Pregnant
    - Diabetes
    - Individuals fitted with medical implants e.g. pacemaker, automatic implantable cardioverter defibrillator (AICD)
    - Recently underwent surgical operations
    - Those with any bone conditions like fractures, osteoporosis
42) Do not overcharge otherwise it may damage the battery and affect usage.
43) This appliance shall be supplied only with a safety extra-low voltage corresponding to the rating marked on the appliance.
44) The product must only be serviced or repaired by the OSIM Service Centre. Do not attempt to disassemble or repair the product.
45) This product contains lithium battery that is only replaceable by a skilled technician. Do not attempt to assemble or repair the product. Contact OSIM Service Centre for any repair.

46) The battery must be removed from the product before it is discarded. The product must be powered off when the battery is removed, and the battery should be safely disposed of. To remove the battery:
    1. Get the OSIM service personnel to remove the battery case.
    2. Remove the fixing screws from the battery case.
    3. Open the battery case and remove the battery.
    4. The battery must be recycled by an OSIM Service Centre or disposed of in accordance with local waste management regulations.

SAVE THESE INSTRUCTIONS

This product is intended for household use only
Warranty is subjected to cancellation if the product is used for commercial purposes.


Name of parts and functions

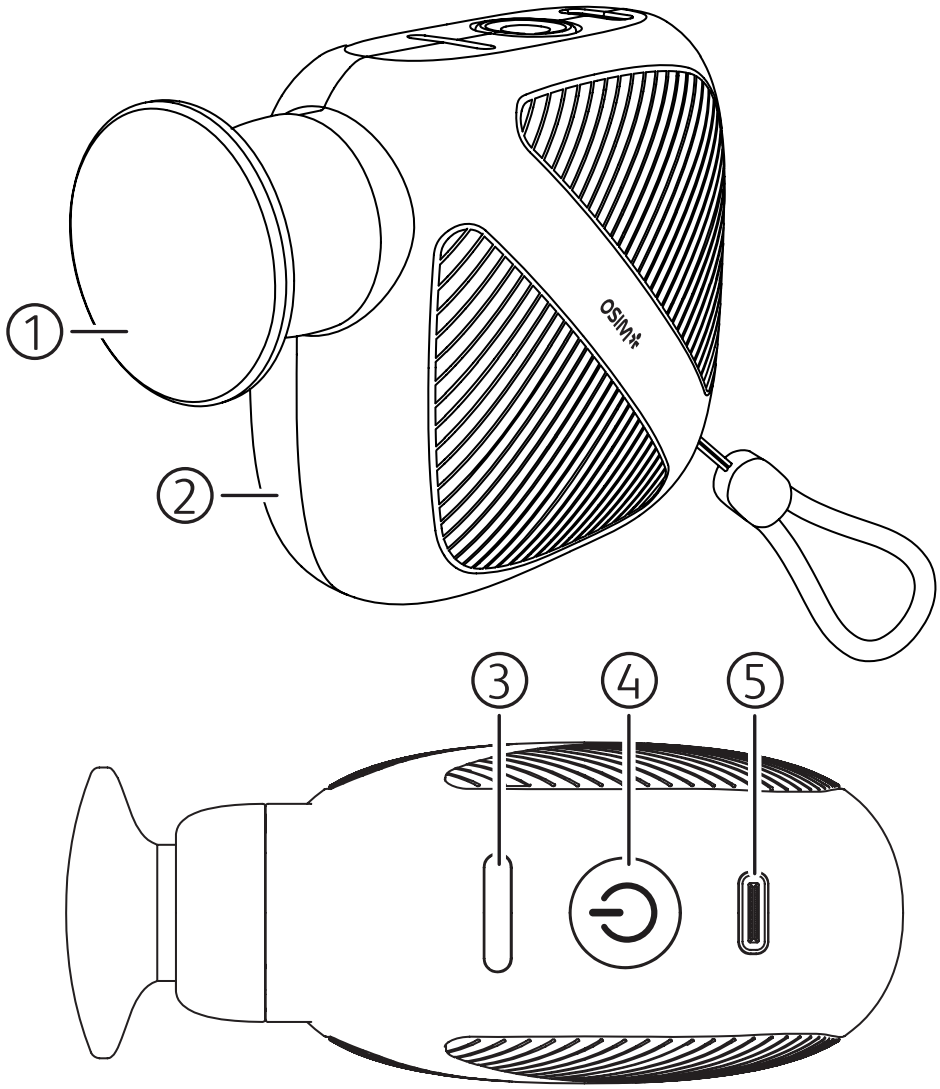

*Product images are for illustrative purposes only and are not drawn to scale.

1. Flat smooth glide head
2. Massage gun
3. Massage intensity/charging LED indicator
4. Power/massage intensity button
5. USB-C port

Name of parts and functions

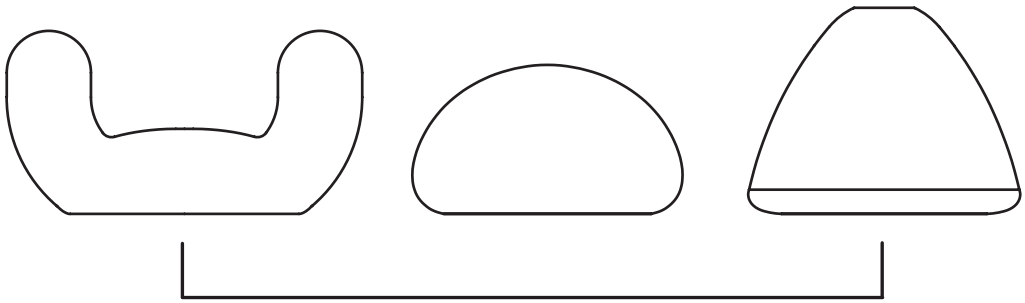

①



②

1. Massage head silicone attachments
   - U-shape target head
   - Round comfort head
   - Cone precision head
2. USB-A to USB-C cable

Note

- Please use only the provided USB cable for charging.
- Product comes with 3 massage head attachments, do not use other massage heads that are not intended for this product.
- Handle the product and accessories with care to avoid accidental dropping.

Operation

Charging the product

- Product should be fully charged before first use.
- Insert the provided USB cable into the USB port of the product.
- Connect the USB cable to electronic devices such as laptops, USB wall power adapters or portable chargers.
- Do not operate the product while charging or in a wet environment.
- Product will not work when it is charging.
- Each full charge (approximately 2 hours) provides up to 1.5 hours of usage. (Usage time may vary on massage intensity and environmental temperature).

LED Charging Indicators

- When the battery is low, the LED indicator will flash according to its current massage intensity.
- When the battery is fully depleted, the product automatically shuts down.
- While charging, the LED indicator will flash white.
- When fully charged, the LED indicator will turn solid white.


Note

- Charge the product every 5 months even if it is not in use, to ensure the battery functions properly.

Operation

Fitting the Massage Head

- When attaching the massage head attachment, slight tilt it and align the edges before inserting it fully onto the massage head.

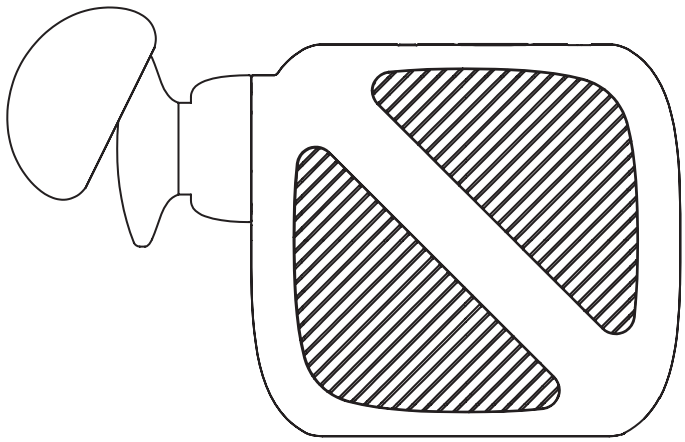


⚠ Caution

- Do not attempt to remove or change the massage head while the massage gun is operating. Always switch off the device first.

Operation


Start/Stop the massage function

- Press and hold the power button to turn on the product and it will be at massage intensity level 1.
- Press the power button again to cycle through the different levels of massage intensity.

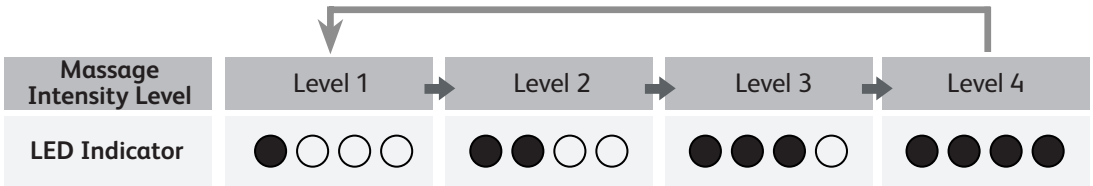

- Auto timer is 15 minutes.
- Press and hold the power button to turn off the product.

Recommended muscle group area

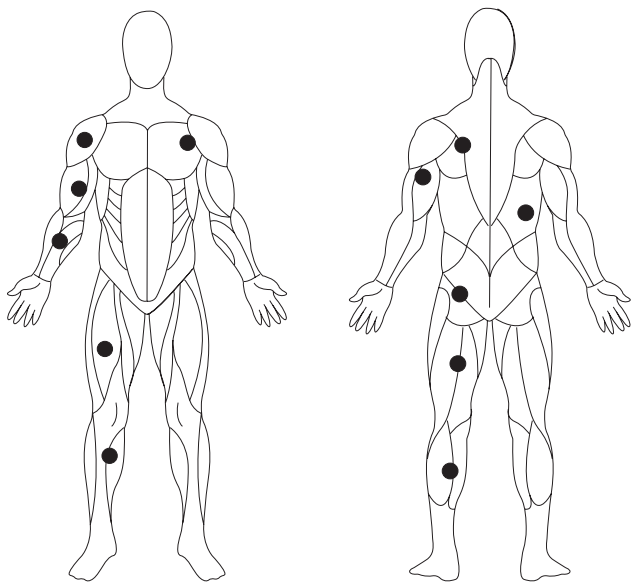


Note

- Do not use the product to massage on one spot for more than 30 seconds.

Operation

⚠ Caution

- Do not massage on the any muscle group for more than 10 minutes.
- Recommend to start with low intensity and slowly increase to max intensity after the muscle group “loosen” up.
- Do not use product on neck, head or any hard areas of the body. Do not use on bones. Use the product only on soft tissue of body.
- If you have or have had any medical condition, please seek advice from your doctor or other qualified health professional before using the product.
- Stop operation immediately if you experience any discomfort.
- It is recommended that you wear proper workout attire when using product.
- To avoid injury, do not touch the parts as shown below while the product is in operation.

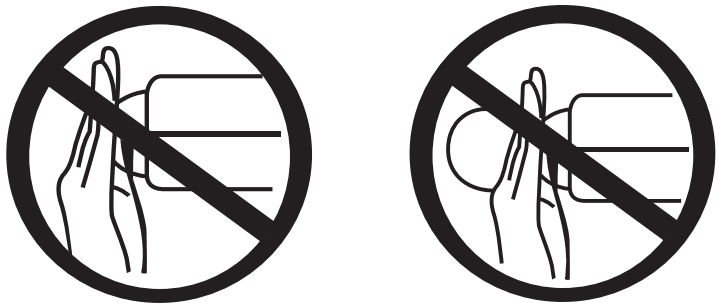

Product care and storage

Product placement and storage

Environmental factors can strongly affect the product physically and mechanically.

Do not expose the product to direct sunlight or in places with extreme heat or air-conditioning vents. These can cause the material to dry up, crack or the color to fade.

If the product is not to be used for a long period of time, cover it with a dust cover.

Clean the product regularly using a dry cloth

Before cleaning, ensure that the main switch is turned off and the cable is disconnected from the product.

The massage head of the product is customarily exposed to the natural body oils of users.

The product can be cleaned regularly with soft, dry cloth to wipe off dust and dirt.

The common micro-fibre cleaning materials or gloves are very well suited for this routine maintenance process. Such materials and gloves are available for sale in most DIY shops.

Do NOT use wet elements for cleaning

The product is made up of electrical components and mechanical parts, which are all very sensitive to moisture. Under no circumstances should they be exposed to any form of water or moisture.

Do NOT use cleaning agents

Under no circumstances should you use any cleaning agents, like benzene or thinner to clean the product.

This may cause the color to fade.

Product care and storage

Do NOT attempt to repair the product

Under no circumstances should you attempt to repair the product, for safety reason.

If you suspect a malfunction, always call the OSIM Service Centre for further assistance and information.

Troubleshooting

If you encounter problems operating the product, please check the following points for rectification. If the problems persist, please switch off the product, unplug the USB cable, and contact the OSIM Service Centre* for servicing.

Do not disassemble or attempt to repair the product yourself. Doing so will void the warranty and OSIM will not be responsible for any subsequent consequences.

Problem	Possible causes / actions
• The product will not start.	• Ensure that you press and hold the power button for 2 seconds. • The battery level is low. Recharge the battery before attempting to use the product again. • Ensure that the product is not in charging mode.
• The massage stops midway.	• The auto timer function of 15 minutes may have lapsed. • The battery level is low. Recharge the battery before attempting to use the product again. • The force applied on muscle is too strong and cause the safety features to activate. Reactivate product to assure function. • If the product stops due to overheating, wait at least 30 minutes before attempting to use it again.

Troubleshooting

Problem	Possible causes / actions
• The product gets hot in hand.	• Stop using product immediately. The overcurrent protection device may have been activated. • Turn off the product and allow it to cool down for at least 30 minutes before touching it again. • If the same problem persists, contact OSIM Service Centre* immediately.

* Please visit us at **www.OSIM.com** for information on the nearest service centre. Product warranty is valid only in the country of purchase.

OS-2253 uGun Mini

感谢您购买 OSIM uGun Mini 按摩器。使用前请仔细阅读操作手册，并特别注意安全事项，以便正确操作和使用本产品。

本手册提供使用者安全及有效的操作方式，请在阅毕后妥为收藏，以便日后参考查询。

简体中文

目录

安全事项	2
配件名称与功能	7
操作方式	9
产品保养及收纳	13
故障排除	14

重要安全事项说明

使用本产品时，请特别注意并遵守下列安全事项:

使用本产品前，请先详阅所有的说明。

危险— 为降低触电风险, 请遵照下列指示:

使用完毕后或清洁前, 请将 USB 数据线从插座中拔除。

警告— 为降低走火、灼伤、触电、或是造成他人受伤的风险，请遵照下列指示:

1) 请务必依照使用手册中所叙述的用途使用本产品。请勿使用非制造商所推荐的零配件。
2) 接通电源后，请看顾好产品。不使用产品时或组装和拆卸配件前，请切断电源。
3) 请勿在毯子或枕头下使用产品。过热可能会造成火灾、灼伤、触电或人员受伤。
4) 如果电源接口松动，请勿使用产品。
5) 手上潮湿时，请勿开关电源或碰触电源插头/ USB 数据线与电源插座/电源。
6) 切断电源后，请握住插头/ USB 数据线接头将其拔出，请勿拉扯电源线/数据线。
7) 如果产品的电源线或插头/ USB 数据线出现损坏故障、电源故障或掉入水中，请勿使用产品。电源意外恢复时，可能会造成人员伤害。请将产品退回 OSIM 傲胜服务中心进行检查和维修。
8) 如果电源插头/ USB 数据线或电源线出现损坏，必须由 OSIM 傲胜服务中心或其授权服务代理更换。
9) 请勿拉扯或把电源线/ USB 数据线当作握把使用。
10) 请勿将电源线/ USB 数据线放在加热表面上。
11) 请勿将电源线/ USB 数据线放在产品或任何重物下方。
12) 请勿将电源线/ USB 数据线缠绕在产品上。
13) 若产品出气口阻塞，请勿使用产品。请保持出气口通畅无阻，不被棉屑、毛发等阻塞。
14) 若产品沾到液体时，请立刻从插座中拔除电源线插头/ USB 数据线，以免触电。
15) 在使用喷雾产品后或氧气不足的场所时，请勿使用产品。

16) 若要停止使用产品，请将所有的操作控制关闭，将电源线插头/ USB 数据线从电源插座中拔除，切断电源。
17) 请勿将任何物件或易燃物品掉入或插入产品的任何开口中。这可能会导致触电、故障或火灾风险。
18) 为保安全，孩童使用产品务必在监督下进行，避免孩童将产品视作游乐器材使用。
19) 8 岁及以上的儿童、身体、感官或精神上有缺陷或缺乏经验与知识的人员，在得到负责安全的人员监护下或接受过监护人员的产品使用指导，并了解到可能存在的危险后，方能使用产品。
20) 儿童不得进行产品清洗或维护。
21) 当身体或手湿时，请勿使用或操作本产品。
22) 请勿在室外使用产品。
23) 请勿在过度潮湿或灰尘密集的环境下使用产品，以免导致机件故障。
24) 请勿在潮湿、通风不良或高温的环境中使用本产品。
25) 请勿将产品置于电热器旁、炉具附近或阳光直射处。
26) 操作过程中不要盖住产品。这可能导致电机温度升高并引起故障或火灾风险。
27) 在室温偏低使用产品时，切勿骤然调升温度。建议将温度逐步调至正常范围后再使用。
28) 将产品由低温储存处移至温热环境使用时，温差可能导致水分在机件内部凝结，影响机器正常运作或造成机件故障。建议在移动后，先将产品在正常室温放置 1 小时后再开始使用。
29) 请勿拆卸、掉落或使产品受到冲击或振动。
30) 请勿将重物堆放于产品上，以免造成意外伤害或是机件故障。
31) 由于产品结构关系，使用产品时会听到一些声音，属于正常情况。
32) 如为避免按摩效果减低或造成伤害，请勿将产品与其它具有疗效的设备或电毯等同时使用。
33) 使用产品时请勿入睡。
34) 首次使用产品时，请务必先选择低强度并较柔和的按摩程序，并于短时间内进行测试，以了解功能并确定您偏好的强度。

35) 请勿在饮酒后或身体不适时使用产品。
36) 为了达到最佳效果，每个自动按摩程序的特设时长为 15 分钟。长时间连续使用可能会触发过热保护装置，因此再次使用前，请确保产品休息 10 分钟。
37) 定期按摩有助于身心健康。请适度的按摩，以避免过度刺激。保持均衡的按摩习惯，才能充分体验按摩带来的益处。
38) 请避免在按摩前 /使用产品前的 1 小时内进食。
39) 按摩时若身体不适，请立即停止操作。身体产生不正常或严重疼痛时，请寻求医疗咨询。
40) 产品非自我诊断或治疗之用；若需诊断或治疗时，应由专业医疗人员处理。
41) 如果您正接受任何药物治疗或属于以下任何类别（但不限于），请在使用前寻求医疗咨询。
    – 心脏病
    – 高血压或低血压、深静脉血栓
    – 怀孕
    – 糖尿病
    – 体内植入了医疗器械（例如：心脏起搏器，自动心脏复律除颤器）
    – 最近动过手术
    – 患有任何骨骼疾病，如：骨折、骨质疏松
42) 不要过度充电，否则可能会损坏电池并影响使用。
43) 本产品只能在与器具上的标记相对应的安全特低电压下供电。
44) 产品仅可由 OSIM 傲胜服务中心修理。请勿自行尝试拆卸或维修。
45) 本产品包含锂电池，只能由技术人员更换。请勿尝试组装或修理产品。联系 OSIM 傲胜服务中心进行维修。
46) 在产品被报废前，必须将电池从产品中取出。取出电池时，产品必须断电，然后安全地处置电池。取出电池的步骤：
    1. 请 OSIM 傲胜维修人员拆卸电池盒。
    2. 卸下电池盒的固定螺丝。
    3. 打开电池盒，将电池取出。
    4. 电池必需由 OSIM 傲胜服务中心回收，或依据中国及其他各地区废弃物管理有关规定妥善处置。

限于中国


47) 家用电器、体育用品的电气部分、电玩具的标志或说明应包括能保证其正常使用、安装、维护、维修的必要内容。
48) 家用电器、体育用品的电气部分、电玩具上的警告或标志应位于明显位置,并清晰、可辨、易见,并在正常条件下,不易褪色和脱落。
49) 制造商应在使用说明中明确应由专业人员执行的维护项目。
50) 制造商应向维修专业人员提供维修指南。维修指南应包含必要的安全事项及产品信息。
51) 使用过程中,请将家用电器的电源插头完全插入电源插座中,并保持电源插头与插座接触良好。
52) 当需要使用延长线电源插座时,请使用符合国家标准要求的延长线电源插座。
53) 人员离开现场时,请将电源断开。
54) 产品出现异常噪声、异常气味、异常高温或故障时,请立即停止使用,关闭开关,断开电源 。
55) 不应从带插座的灯头上引接电源供给家用电器。
56) 延长线电源插座所接家用电器的总额定电流值,不应超过原固定插座或线路的额定电流值。
57) 本产品不应在易燃易爆物品附近或类似环境中使用。
58) 使用者不应自行拆卸家用电器,不应变更内部接线、部件和保护装置。
59) 从插座上拔下插头时,不应对电源线施加拉力。
60) 使用者不应以普通导电体或超出规定电流容量的熔断体替换家用电器和电源的熔断体。
61) 使用者不应自行改变低压断路器或剩余电流动作保护器的设定值。
62) 产品出现异常噪声、异常气味、异常高温或故障时，请立即停止使用，关闭开关，断开电源。
63) 使用者不应自行拆卸，不应变更内部接线、部件和保护装置。
64) 使用者不应以普通导电体或超出规定电流容量的熔断体替换家用电器和电源的熔断体。

65) 使用者不应自行改变低压断路器或剩余电流动作保护器的设定值。
66) 充电环境温度：0℃～40℃，禁止在潮湿、淋雨、暴晒或高温环境中充电。
67) 充满后及时断开，避免长时间连续过充。
68) 充电接口严禁进水、受潮或接触金属异物，潮湿状态下禁止充电。

请妥善保管此份安全事项说明书

本产品仅适于家用
如果产品用于商业目的，保修将被取消


配件名称与功能

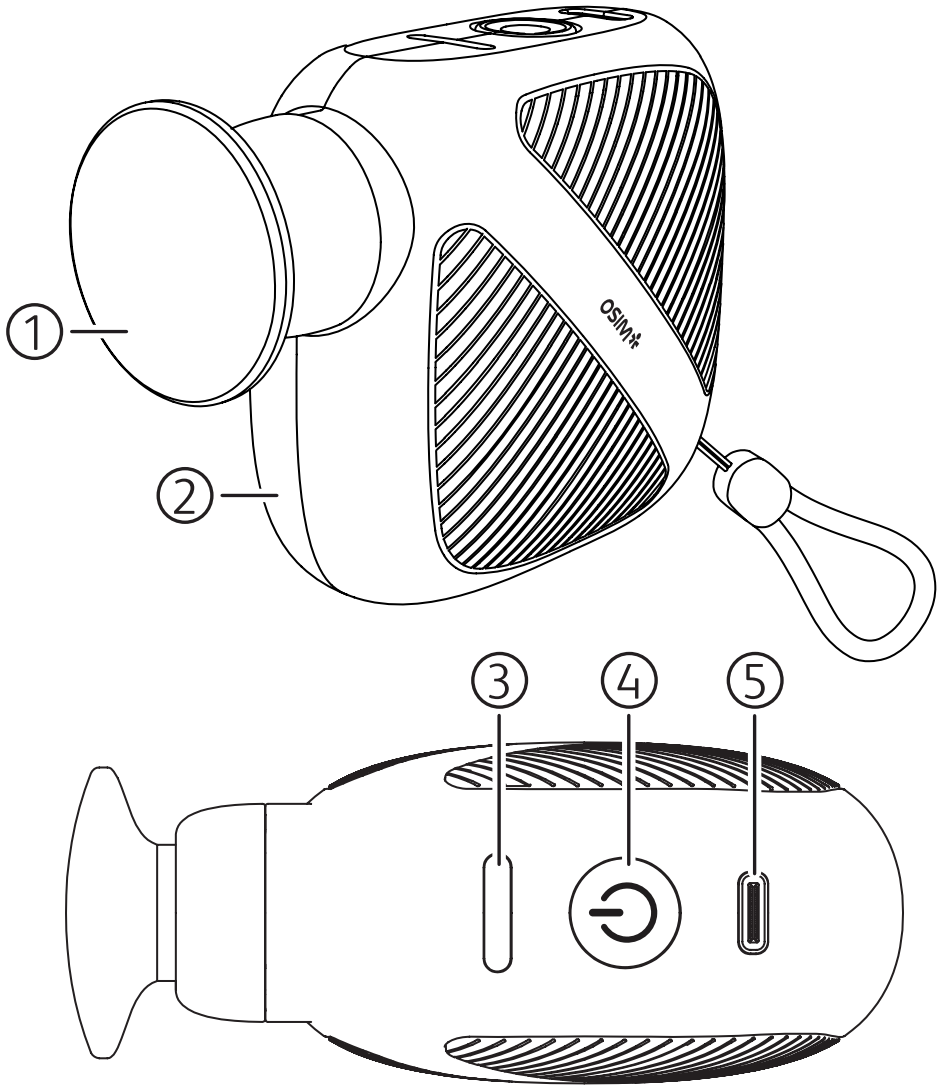

* 产品图片仅供说明用途，并不按比例绘制。

1. 平面顺滑按摩头
2. 筋膜枪
3. 按摩强度/充电状态 LED 显示灯
4. 电源开关/按摩强度调节按钮
6. USB-C 接口

配件名称与功能

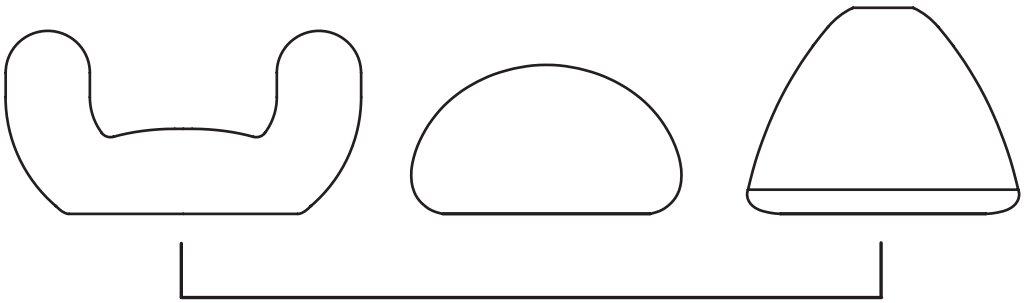

①



②

1. 按摩头套
   - U 型定位按摩头
   - 舒适圆形按摩头
   - 精准锥形按摩头
2. USB-A 至 USB-C 数据线

注意

- 请用产品所附的 USB 数据线。
- 产品所附 3 种不同形状按摩头，请勿使用不属于产品的按摩头。
- 小心拿取产品和配件，以免意外滑落。

操作方式

产品充电

- 首次使用产品前，应将其充满电。
- 将随附的 USB 数据线插入产品的 USB 接口。
- 将 USB 数据线另一端连结至电子设备，如笔记型电脑、USB 壁式适配器或便携式充电器。
- 请勿在充电时或潮湿的环境中使用或操作产品。
- 产品在进行充电时不能操作。
- 充电时间约 2 小时，提供约 1.5 小时使用时间。所选的按摩强度和环境温度将会影响产品的使用时间。

充电状态 LED 显示灯

- 电池电量低时， LED 显示灯会按当时的按摩强度显示灯闪烁。
- 电量耗尽时，产品会自动关机。
- 电池充电时， LED 显示灯会持续性闪烁白灯。
- 电池充足后， LED 显示灯会常亮。


注意

- 即使不使用产品，也应每 5 个月充电一次，以确保电池正常操作。

操作方式

按摩头拆装

- 安装按摩头套时，请稍微倾斜按摩头套，并对齐边缘后再完全插入按摩枪的接口处。

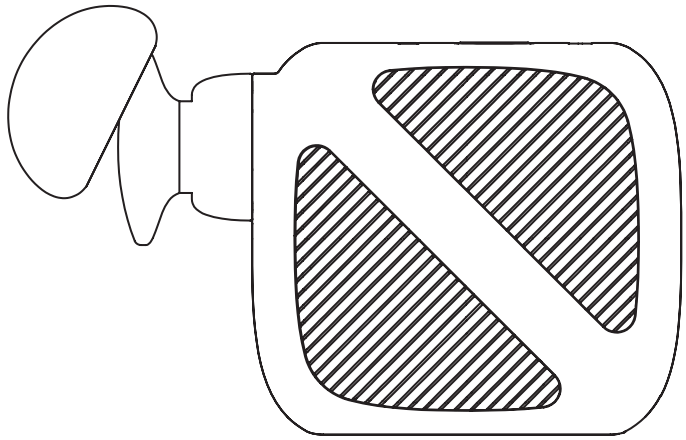

⚠ 小心

- 切勿在产品运行时尝试拆卸或更换按摩头。请务必先关闭产品电源后，再进行更换。

操作方式


开始/停止按摩

- 长按电源按钮以启动产品，启动后默认的按摩强度等级 1。
- 重复按下电源按钮，可在不同按摩强度之间循环切换。

按摩强度等级	等级 1	等级 2	等级 3	等级 4
LED 显示灯	●○○○	●●○○	●●●○	●●●●

- 自动定时约为 15 分钟。
- 长按电源按钮以关闭产品。

建议适用的肌肉群

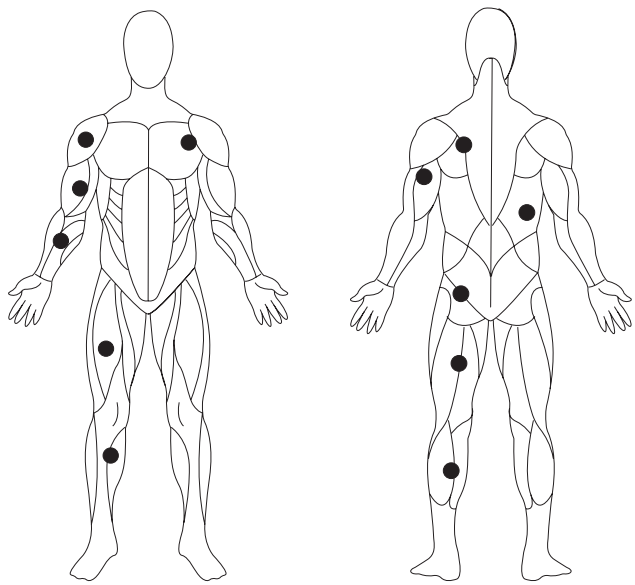


注意

- 不可在同一个点上持续按摩超过 30 秒。

操作方式

⚠ 小心

- 不可在同一个肌肉群持续按摩超过 10 分钟。
- 建议从低强度开始按摩，慢慢往上调，以确保肌肉群不会受伤。
- 不可在颈部、头部或身体的任何坚硬部位使用产品，也不要 在骨头上使用。 仅在身体的肌肉上使用该产品。
- 如果您有或曾经有过任何健康状况，请在使用产品前咨询您 的医生或其他合格的健康专业人士。
- 如果您感到任何不适，请立即停止使用。
- 建议您在使用产品时穿着适当的运动服。
- 产品运行时，请勿触碰下图所示部位，以避免受伤。

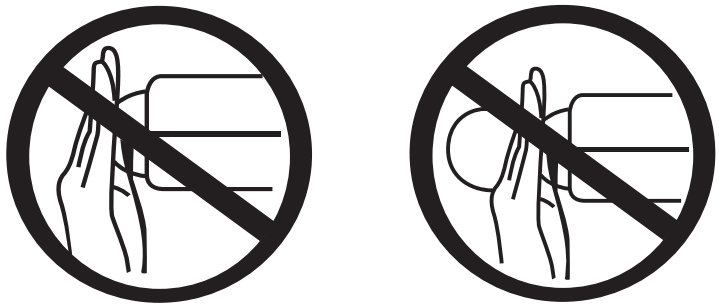

产品保养及收纳

产品摆放位置及收纳方式

置放地点周遭的环境因素往往对产品的外观和内部机械装置产生极大影响。切勿将产品摆放于阳光直射或高温处，以及空调出风口处，以免产品材质发生龟裂及褪色等状况。

若长时间不使用产品，请覆以防尘罩。

定期以干布擦拭产品

清洁产品前请先确认产品已关机并且将 USB 数据线拔除。

一般而言，产品常接触到使用者身体所产生的天然油脂，所以清洁时，使用柔软干布擦拭即可。市面上 DIY 用品店可购得的超细纤维（microfiber）清洁用具或手套便是极佳选择。

请勿使用液状清洁剂清洁产品

本产品主要由电子零件和机械组件所构成，潮湿及水气皆会造成不良影响，因此需绝对避免产品接触水气或任何液体。

切勿使用清洁溶剂

无论任何情况下皆不可使用含苯或稀释剂等清洁剂，以免导致产品材质褪色。

切勿自行修理产品

无论任何情况下，请勿自行修理产品以免发生危险。

若怀疑产品有故障的可能性，请拨打 OSIM 傲胜服务中心专线电话，寻求进一步协助和相关资讯。

故障排除

若在使用产品时遇到问题，请参考下列几点提示方式及可能解决方式。若产品仍处于故障状态或无法使用，请关掉电源开关并从产品上移开 USB 数据线，并和 OSIM 傲胜服务中心联络*。

请勿自行拆卸或维修产品。自行拆卸或维修而导致产品损坏将造成产品保固失效，OSIM 傲胜亦无责任担负该情况所造成的任何后果。

状况	可能原因 / 处理方式
• 无法启动产品。	• 确认您已长按电源按钮 2 秒。 • 电池电量低，请充电后再次使用。 • 请确认产品不是在充电的状态。
• 按摩在进行当中忽然停止。	• 15 分钟自动定时已完成。 • 电池电量低。请充电后再次使用产品。 • 按摩压力太大，导致产品电机保护机制启动。重新启动按摩枪确定产品功能。 • 如果因过热而导致产品停止运作，请至少稍等 30 分钟再重新启动操作。

故障排除

状况	可能原因 / 处理方式
• 产品在手中感觉发烫。	• 立刻停止使用产品。如果因过热导致产品停止动作，请将总电源关闭。 • 请等待 30 分钟，观察产品是否仍然发烫。 • 如果问题仍然存在，立刻联系 OSIM 傲胜服务中心*。

* 有关服务中心所在地点，请浏览 www.OSIM.com。
产品保证书仅有效于其购买国家。

记录

OS-2253 uGun Mini

感謝您購買 OSIM uGun Mini。使用前請仔細閱讀操作手冊，並特別注意安全事項，以便正確操作和使用本產品。

本手冊提供使用者安全及有效的操作方式，請在閱畢後妥為收藏，以便日後參考查詢。

目錄

安全事項	2
配件名稱與功能	6
操作方式	8
產品保養及收納	12
故障排除	13

繁體中文

重要安全事項説明

使用本產品時，請特別注意並遵守下列安全事項：
使用本產品前，請先詳閱所有的説明。

危險— 為降低觸電風險，請遵照下列指示：
使用完畢後或清潔前，請將 USB 充電線從插座中拔除。

警告— 為降低走火、灼傷、觸電、或是造成他人受傷的風險，請遵照下列指示：

1) 請務必依照使用手冊中所敘述的用途使用本產品。 請勿使用非製造商所推薦的零配件。
2) 接通電源後，請看顧好產品。不使用產品時或組裝和拆卸配件前，請切斷電源。
3) 請勿在毯子或枕頭下使用產品。 過熱可能會造成火災、灼傷、觸電或人員受傷。
4) 如果電源接口鬆動，請勿使用產品。
5) 手上潮濕時，請勿開關電源或觸碰電源插頭/USB 充電線與電源插座/電源。
6) 切斷電源後，請握住插頭/USB 充電線接頭將其拔出，請勿拉扯電源線/充電線。
7) 如果產品的電源線或插頭/USB 充電線出現損壞故障、電源故障或掉入水中， 請勿使用產品。 電源意外恢復時，可能會造成人員傷害。 請將產品退回 OSIM 服務中心進行檢查和維修。
8) 如果電源插頭/USB 充電線或電源線出現損壞，必須由 OSIM 服務中心或其授權服務代理更換。
9) 請勿拉扯或把電源線/USB 充電線當作握把使用。
10) 請勿將電源線/USB 充電線放在加熱表面上。
11) 請勿將電源線/USB 充電線放在產品或任何重物下方。
12) 請勿將電源線/USB 充電線纏繞在產品上。
13) 若產品出氣口阻塞，請勿使用產品。請保持出氣口通暢無阻，不被棉屑、毛髮等阻塞。
14) 若產品沾到液體時，請立刻從插座中拔除電源線插頭/USB 充電線，以免觸電。

15) 在使用噴霧產品後或氧氣不足的場所時，請勿使用產品。
16) 若要停止使用產品，請將所有的操作控制關閉，將電源線插頭/USB 充電線從電源插座中拔除，切斷電源。
17) 請勿將任何物件或易燃物品掉入或插入產品的任何開口中。這可能會導致觸電、故障或火災風險。
18) 為保安全，孩童使用產品務必在監督下進行，避免孩童將產品視作遊樂器材使用。
19) 8 歲及以上的兒童、身體、感官或精神上有缺陷或缺乏經驗與知識的人員，在得到負責安全的人員監護下或接受過監護人員的產品使用指導，並了解到可能存在的危險後，方能使用產品。
20) 兒童不得為產品進行清洗或維護。
21) 當身體或手潮濕時， 請勿使用或操作產品。
22) 請勿在室外使用產品。
23) 請勿在過度潮濕或灰塵密集的環境下使用產品，以免導致機件故障。
24) 請勿在潮濕、通風不良或高溫的環境中使用本產品。
25) 請勿將產品置於電熱器旁、爐具附近或陽光直射處。
26) 操作過程中不要蓋住產品。 這可能導致電機溫度升高並引起故障或火災風險。
27) 在室溫偏低使用產品時，切勿驟然調升溫度。建議將溫度逐步調至正常範圍後再使用。
28) 將產品由低溫儲存處移至溫熱環境使用時，溫差可能導致水分在機件內部凝結，影響機器正常運作或造成機件故障。建議在移動後，先將產品在正常室溫放置 1 小時後再開始使用。
29) 請勿拆卸、掉落或使產品受到衝擊或振動。
30) 請勿將重物堆放於產品上，以免造成意外傷害或是機件故障。
31) 由於產品結構關係，使用產品時會聽到一些聲音，屬於正常情況。
32) 為避免按摩效果減低或造成傷害，請勿將產品與其它具有療效的設備或電毯等同時使用。

33) 使用產品時請勿入睡。
34) 首次使用產品時，請務必先選擇低強度並較柔和的按摩程式，並於短時間內進行測試，以了解功能並確定您偏好的強度。
35) 請勿在飲酒後或身體不適時使用產品。
36) 為了達到最佳效果，每個自動按摩程式的特設時長為 15 分鐘。長時間連續使用可能會觸發過熱保護裝置，因此再次使用前，請確保產品休息 10 分鐘。
37) 定期按摩有助於身心健康。請適度的按摩，以避免過度刺激。保持均衡的按摩習慣，才能充分體驗按摩帶來的益處。
38) 請避免在按摩前 /使用產品前的 1 小時內進食。
39) 按摩時若身體不適，請立即停止操作。身體產生不正常或嚴重疼痛時，請尋求醫療諮詢。
40) 產品非自我診斷或治療之用；若需診斷或治療時，應由專業醫療人員處理。
41) 如果您正接受任何藥物治療或屬於以下任何類別 (但不限於)，請在使用前尋求醫療諮詢。
    - 心臟病
    - 高血壓或低血壓、深層靜脈栓塞
    - 懷孕
    - 糖尿病
    - 體內植入了醫療器械 （例如：心律調節器，自動心臟去顫器）
    - 最近動過手術
    - 患有任何骨骼疾病，如：骨折、骨質疏鬆
42) 不要過度充電，否則可能會損壞電池並影響使用。
43) 本產品只能在與器具上的標記相對應的安全特低電壓下供電。
44) 產品僅可由 OSIM 服務中心修理。請勿自行嘗試拆卸或維修。
45) 本產品包含鋰電池，只能由技術人員更換。請勿嘗試組裝或修理產品。聯繫 OSIM 服務中心進行維修。

46) 在產品被報廢前，必須將電池從產品中取出。取出電池時，產品必須斷電，然後安全地處理電池。 取出電池的步驟 ：


1. 請 OSIM 維修人員拆卸電池盒。
2. 卸下電池盒的固定螺絲。
3. 打開電池盒，將電池取出。
4. 電池必須由 OSIM 維修中心回收，或依據中國及其他各地區廢棄物管理相關規定妥善處置。

請妥善保管此份安全事項説明書

本產品僅適於家用

如果產品用於商業目的，保固將被取消


配件名稱與功能

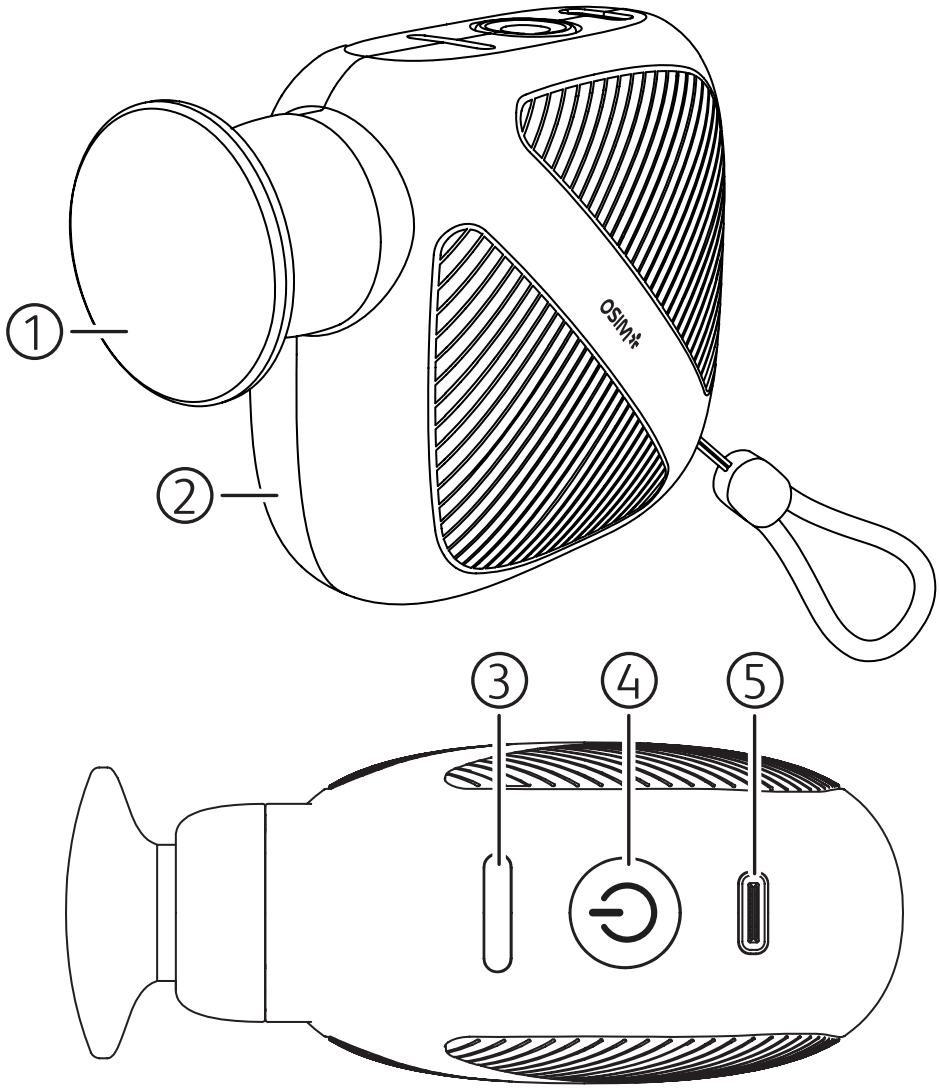

* 產品圖片僅供說明用途，並不按比例繪製。

1. 平面滑順按摩頭
2. 筋膜槍
3. 按摩強度/充電狀態 LED 顯示燈
4. 電源開關/按摩強度調節按鈕
5. USB-C 充電孔

配件名稱與功能

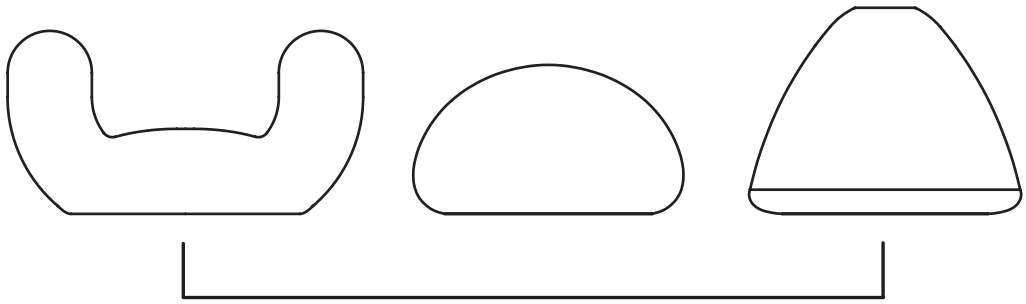

①



②

1. 按摩頭套
   - U 型定位按摩頭套
   - 舒適圓形按摩頭套
   - 精準錐形按摩頭套
2. USB-A 至 USB-C 充電線

注意

- 請用產品所附的 USB 充電線。
- 產品所附 3 種不同形狀按摩頭，請勿使用不屬於產品的按摩頭。
- 小心拿取產品和配件，以免意外滑落。

操作方式

產品充電

- 首次使用產品前，應將其充滿電。
- 將隨附的 USB 充電線插入產品的 USB 充電孔。
- 將 USB 充電線另一端連接至電子設備，如筆記型電腦、USB 壁式供應器或行動電源。
- 請勿在充電時或潮濕的環境中使用或操作產品。
- 產品在進行充電時不能操作。
- 充電時間約 2 小時，提供至少 1.5 小時使用時間。所選的按摩強度和環境溫度將會影響產品的使用時間。

充電狀態 LED 顯示燈

- 電池電量低時，LED 顯示燈會按當時的按摩強度顯示燈閃爍。
- 電量耗盡時，產品會自動關機。
- 電池充電時，LED 顯示燈會持續性閃爍白燈。
- 電池充足後，LED 顯示燈會恆亮。


注意

- 即使不使用產品，也應每 5 個月充電一次，以確保電池正常運作。

操作方式

按摩頭拆裝

- 安裝按摩頭套時，請稍微傾斜按摩頭套，對齊邊緣後再完全插入按摩槍的接口處。

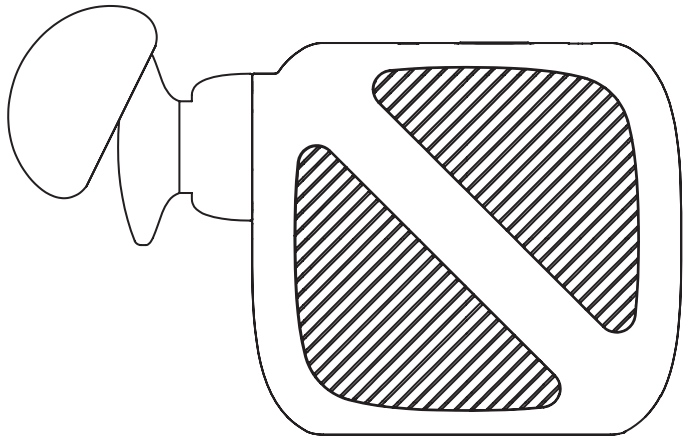

⚠ 小心

- 切勿在產品運行時嘗試拆卸或更換按摩頭。請務必先關閉產品電源後，再進行更換。

操作方式


開始/停止按摩

- 長按電源按鈕以啓動產品，啟動後預設的按摩強度等級 1。
- 重複按下電源按鈕，可在不同按摩強度之間循環切換。

按摩强度等级	等级 1 →	等级 2 →	等级 3 →	等级 4
LED 顯示燈	●○○○	●●○○	●●●○	●●●●

- 自動定時約為 15 分鐘。
- 長按電源按鈕以關閉產品。

建議適用的肌肉群

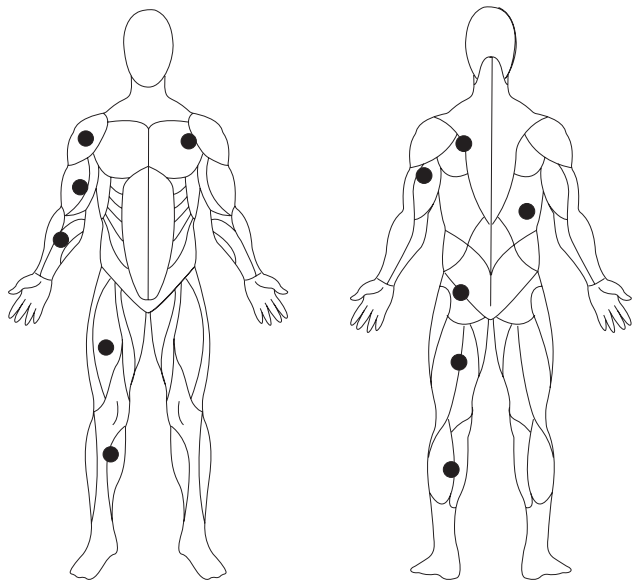

注意

- 不可在同一個點上持續按摩超過 30 秒。

操作方式

開始/停止按摩

- 請不要在同一個肌肉群持續按摩超過 10 分鐘。
- 建議從低強度開始按摩，慢慢往上調，以確保肌肉群不會受傷。
- 不可在頸部、頭部或身體的任何堅硬部位使用產品，也不要在骨頭上使用。僅在身體的肌肉上使用該產品。
- 如果您有或曾經有過任何健康狀況，請在使用產品前諮詢您的醫生或其他合格的健康專業人士。
- 如果您感到任何不適，請立即停止使用。
- 建議您在使用產品時穿著適當的運動服。
- 產品運作時，請勿觸碰下圖所示部位，以避免受傷。





產品保養及收納

產品擺放位置及收納方式

置放地點周遭的環境因素往往對產品的外觀和內部機械裝置產生極大影響。切勿將產品擺放於陽光直射或高溫處，以及空調出風口處，以免產品材質發生龜裂及褪色等狀況。

若長時間不使用產品，請覆以防塵罩。

定期以乾布擦拭產品

清潔產品前請先確認產品已關機並且將 USB 充電線拔除。

一般而言，產品常接觸到使用者身體所產生的天然油脂，所以清潔時，使用柔軟乾布擦拭即可。市面上 DIY 用品店可購得的超細纖維 (microfiber) 清潔用具或手套便是極佳選擇。

請勿使用液狀清潔劑來清潔產品

本產品主要由電子零件和機械組件所構成，潮濕及水氣皆會造成不良影響，因此需絕對避免產品接觸水氣或任何液體。

切勿使用清潔溶劑

無論任何情況下皆不可使用含苯或稀釋劑等清潔劑，以免導致產品材質褪色。

切勿自行修理產品

無論任何情況下，請勿自行修理產品以免發生危險。

若懷疑產品故障的可能性，請撥打 OSIM 服務中心專線電話，尋求進一步協助及相關資訊。

故障排除

若在使用產品時遇到問題，請參考下列幾點提示方式及可能解決方式。 若產品仍處於故障狀態或無法使用，請關掉電源開關並從產品上移開 USB 充電線，並和 OSIM 服務中心聯絡*。

請勿自行拆卸或維修產品。 自行拆卸或維修而導致產品損壞將造成產品保證失效，OSIM 亦無責任擔負該情況所造成的任何後果。

狀況	可能原因 / 處理方式
• 無法啟動產品。	• 確認您已長按電源按鈕 2 秒。 • 電池電量低，請充電後再使用。 • 請確認產品不是在充電的狀態。
• 按摩在進行當中忽然停止。	• 15 分鐘自動定時已完成。 • 電池電量低。 請充電後再次使用產品。 • 過度施加壓力在按摩頭上，導致產品馬達保護機制啟動。重新啟動按摩槍確定產品功能。 • 如果因過熱而導致產品停止運作，請至少稍等 30 分鐘再重新啟動操作。

故障排除

狀況	可能原因 / 處理方式
• 產品在手中感覺發燙。	• 立刻停止使用產品。如果因過熱導致產品停止動作，請將總電源關閉。 • 請等待 30 分鐘，觀察產品是否仍然發燙。 • 如果問題仍然存在，立刻聯繫 OSIM 服務中心*。

* 有關服務中心所在地點，請瀏覽 www.OSIM.com。
產品保固服務證書僅有效於其購買國家。

記錄

記錄

OS-2253
uGun Mini

Specification / 规格说明 / 規格説明

Country / Region:
Singapore, Malaysia, Indonesia, Thailand, Cambodia, Vietnam, Myanmar, Philippines, Hong Kong (China), Australia, New Zealand, India, Pakistan, Bahrain, United Arab Emirates, Saudi Arabia, Qatar, 中国大陆, 台灣地區

Specification / 规格说明 / 規格説明

Model name 产品名称 產品名稱	uGun Mini 按摩器
Model number 产品型号 產品型號	OS-2253
Rated Input USB 缆线输入 USB 充電線輸入	5V ⎓ 2A
Auto Timer 自动定时 自動定時	Approx. 15 minutes 约 15 分钟 約 15 分鐘
Dimensions 尺寸 尺寸	91.3 (L) x 37.8 (W) x 64.3 (H) mm 91.3 (长) x 37.8 (宽) x 64.3 (高) 毫米 91.3 (長) x 37.8 (寬) x 64.3 (高) 毫米
Weight Net weight 净重 淨重	 Approx. 210 g 约 210 公克 約 210 公克
Gross weight 毛重 毛重	Approx. 670 g 约 670 公克 約 670 公克

限用物質及其化學符號

設備名稱：按摩器 Equipment Name				型號（型式）：OS-2253 Type designation (Type)		
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr^{+6})	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電路板	○	○	○	○	○	○
電動機	○	○	○	○	○	○
開關	○	○	○	○	○	○
電源線	○	○	○	○	○	○
外殼	○	○	○	○	○	○

備考 1.〝超出 0.1 wt %〞及〝超出 0.01 wt %〞係指限用物質之百分比含量超出百分比含量基準值。
Note 1. "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考 2.〝○〞係指該項限用物質之百分比含量未超出百分比含量基準值。
Note 2. "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考 3.〝 - 〞係指該項限用物質為排除項目。
Note 3. The "－" indicates that the restricted substance corresponds to the exemption.

有害物质

本产品有害物质名称及含量标识如下表

部件名称	有害物质									
	铅（pb）	汞（Hg）	镉（Cd）	六价铬（Cr^{+6}）	多溴联苯（PBB）	多溴二苯醚（PBDE）	邻苯二甲酸二丁酯（DBP）	邻苯二甲酸丁苄酯（BBP）	邻苯二甲酸二异丁酯（DIBP）	邻苯二甲酸二(2-乙基)己酯（DEHP）
外壳	○	○	○	○	○	○	○	○	○	○
塑料件	○	○	○	○	○	○	○	○	○	○
金属件	○	○	○	○	○	○	○	○	○	○
线路板及电子元器件	○	○	○	○	○	○	○	○	○	○
内部导线	○	○	○	○	○	○	○	○	○	○
电机	○	○	○	○	○	○	○	○	○	○
电源线及开关	○	○	○	○	○	○	○	○	○	○

○：表示该有害物质在该部件所有均质材料中的含量均不超出电器电子产品有害物质限制使用国家标准要求。

X：表示该有害物质至少在该部件的某一均质材料中的含量超出电器电子产品有害物质限制使用国家标准。

：以上未列出的部件，表明其有害物质含量均不超出电器电子产品有害物质限制使用国家标准要求。

环保使用期限说明

此电子电器产品在说明书所述的使用条件下使用本产品。含有的有害物质或元素不致发生外泄，不致对环境造成污染或对人身、财产造成严重损害的期限为10年。





Designed & Developed in Singapore by OSIM International Pte. Ltd.
© 2025 All rights reserved. www.OSIM.com
OSIM is Subsidiary of V3 Brands