


uScalp 2

OS-190 Instruction Sheet

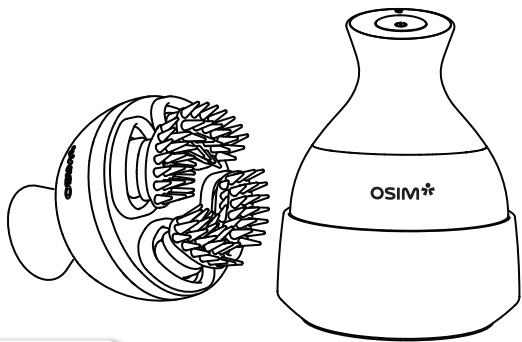

Safety

- Stop using immediately should you experience any discomfort or redness on the skin.
- The suggested duration is not more than 5 minutes per session. Do not perform continuous massage on the same spot of your body for a prolonged period as this may result in excessive stimulation.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product. Cleaning and user maintenance should not be done by children.
- Keep the product away from pets and children.
- Do not use the product if any part of the casing is cracked.
- Do not insert any object into any opening of the product.
- Product can be used when showering, not recommended to be immersed in water
- The product is designed for personal use and not for commercial purposes.
- Do not attempt to disassemble or repair the product. Contact OSIM Service Center* for examination and repair.

*Please visit us at www.OSIM.com for information on the nearest service center.

Specifications

Model name	OSIM uScalp 2
Model number	OS-190
USB Input	5V  1A
Dimension	106(L) X 106(W) X 137(H) mm
Net Weight	Approx. 451g
Gross Weight	Approx. 651g



Correct Disposal of this product


This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment of human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Safety

- This appliance contains batteries that are non-replaceable.
- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- The battery is to be disposed of safely.

WARNING: For the purposes of recharging the battery, only use the detachable supply (model: A806A-050100U-UK1) unit provided with this appliance.

Names of parts and functions

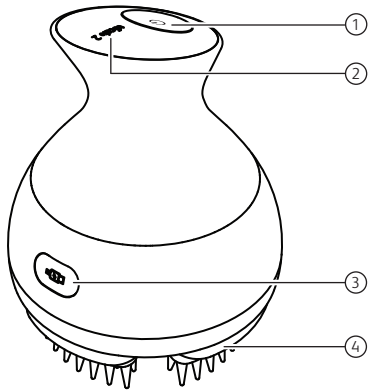

1. Power ON/OFF & Mode selection button
2. LED indicator
3. Micro USB jack
4. Massage heads (removable and washable)

Operation

Charging

- Connect the uScalp 2 using the supplied USB cable to the supplied power adapter.
- During charging the LED indicator will flicker, and will switch to 'ON' when it is fully charged.
- The uScalp 2 will not work when it is charging, as it will automatically enable its self-protection program and stop operating.


Mode Selection

- Turn uScalp 2 on by pressing the  button.
- Press the  button anytime during the massage to cycle through the 3 auto massage modes:
 - i) Strong (default mode when switched on, LED will blink for 1 sec and remain lit)
 - ii) Gentle (LED will blink for 2 sec and remain lit)
 - iii) Combination (LED will blink for 3 sec and remain lit)
- Press and hold the  button for 3 sec to turn off uScalp 2.


Product care and storage

- Do not stack heavy items on the product.
- Place product on the base provided when not in use.
- Before cleaning, ensure that the product is turned off and disconnected from the power source.
- Do not use volatile liquids such as benzene, thinner or gasoline for cleaning.
- Massage heads are removable for washing.

配件名称与功能

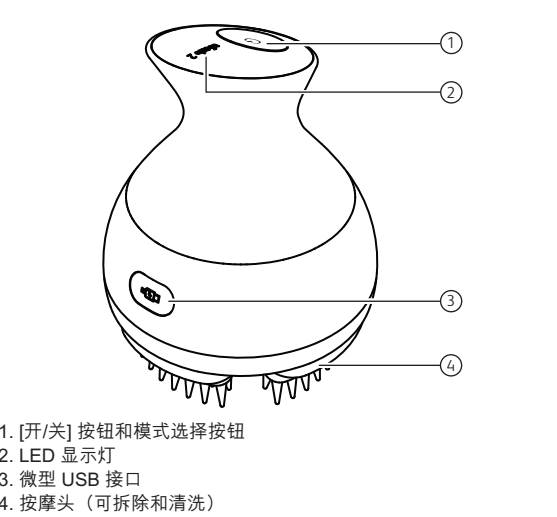

配件名稱與功能

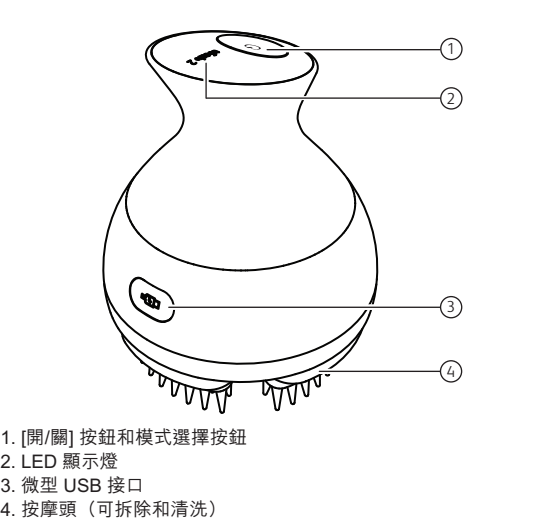

安全事项

- 按摩时若身体感到任何不适或皮肤发红，请立即停止操作。
- 建议每次使用时间勿超过 5 分钟。请避免持续按摩身体同一部位以免造成刺激过度。
- 若孩童、身心功能或智能障碍者想使用本产品，必须要有有人在旁指导且能负责其安全。
- 请务必督导及确认儿童未将本产品视为游乐器材使用。儿童不得进行产品清洗或维护。
- 请确保儿童及宠物与本产品保持距离。
- 若发现产品外壳有任何裂痕，请勿使用产品。
- 请勿塞入任何物品于产品内。
- 此产品可在淋浴时使用，不建议长时间浸泡在水中。
- 本产品设计为家用产品，不可从事商业用途。
- 请勿尝试自行拆卸或维修本产品。本产品仅能由 OSIM 傲胜维修服务中心*修理。
- 产品含有不可更换的电池。
- 在废弃产品前，必须先将电池从产品中移除。
- 当移除电池时，产品必须先断电。
- 电池必须安全处置。

警告：给电池充电时，只能使用产品自带的适配器
(中规适配器型号：A18A-050100U-CN2)。

*有关维修服务中心所在地，请浏览 www.OSIM.com

安全事項

- 按摩時若身體感到任何不適或皮膚發紅，請立即停止操作。
- 建議每次使用時間勿超過 5 分鐘。請避免持續按摩身體同一部位以免造成刺激過度。
- 若孩童、身心 功能或智能障礙者想使用本產品，必須要有有人在旁指導且能負責其安全。
- 請務必督導及確認兒童未將本產品視為遊樂器材使用。兒童不得進行產品清洗或維護。
- 請確保兒童及寵物與本產品保持距離。
- 若發現產品外殼有任何裂痕，請勿使用產品。
- 請勿塞入任何物品與產品內。
- 此產品可在淋浴時使用，不建議長時間浸泡在水中。
- 本產品設計為家用產品，不可從事商業用途。
- 請勿嘗試自行拆卸或維修本產品。本產品僅能由 OSIM 傲勝維修服務中心*修理。
- 產品含有不可更換的電池。
- 在廢棄產品前，必須先將電池從產品中移除。
- 當移除電池時，產品必須先斷電。
- 電池必須安全處置。

警告：給電池充電時，只能使用產品自帶的適配器
(台規適配器型號：A98A-050100U-US1，A18A-050100U-US2)。

*有關維修服務中心所在地點，請瀏覽 www.OSIM.com

操作方式

充电

- 使用提供的微型 USB 连接线将 uScalp 2 连接至提供的电源适配器。
- 在充电期间，LED 指示灯将闪烁，并在充满电时会常亮。
- uScalp 2 在进行充电时将不能操作，因为产品会自动启动自我保护程序，停止操作。

模式选择

- 按下[]按钮便能启动 uScalp 2。
- 只需按下[]按钮便能顺序转换按摩程序。
 - i) 快 （开启 uScalp 2 时的默认模式、LED 灯会闪烁一秒、按摩时 LED 灯会亮着）
 - ii) 慢 （LED 灯会闪烁两秒、按摩时 LED 灯会亮着）
 - iii) 综合 （LED 灯会闪烁三秒、按摩时 LED 灯会亮着）
- 长按 [] 按钮 3 秒以关闭 uScalp 2。

产品保养及收纳

- 请勿在产品上堆放重物。
- 没有使用产品时请将产品置放于所附的底盖内。
- 清洁产品前请先确认总开关已关闭，并与电源断开连接。
- 切勿使用挥发性液体，如：苯、稀释剂、或是汽油来清洁产品。
- 可拆除按摩头清洗。

操作方式

充電

- 使用提供的微型 USB 連接線將 uScalp 2 連接至提供的電源適配器。
- 在充電期間，LED 指示燈將閃爍，並在充滿電時會常亮。
- uScalp 2 在進行充電時將不能操作，因為產品會自動啟動自我保護程序，停止操作。

模式選擇

- 按下[]按鈕便能啟動 uScalp 2。
- 只需按下[]按鈕便能順序轉換按摩程序。
 - i) 快 （開啟 uScalp 2 時的默認模式、LED 燈會閃爍一秒、按摩時LED燈會亮著）
 - ii) 慢 （LED 燈會閃爍兩秒、按摩時 LED 燈會亮著）
 - iii) 綜合 （LED 燈會閃爍三秒、按摩時 LED 燈會亮著）
- 長按[]按鈕 3 秒以關閉 uScalp 2。

產品保養及收納

- 請勿在產品上堆放重物。
- 沒有使用產品時請將產品置放於所附的底蓋內。
- 清潔產品前請先確認總開關已關閉，並與電源斷開連接。
- 切勿使用揮發性液體，如：苯、稀釋劑、或是汽油來清潔產品。
- 可拆除按摩頭清洗。

规格说明

产品名称	OSIM uScalp 2 按摩器（傲胜摩力抓抓 2）
产品型号	OS-190
额定电压	5伏特 1安培
尺寸	106 (长)x 106 (寬)x 137 (高)毫米
净重	約451克
毛重	約651克

規格說明

產品名稱	OSIM uScalp 2
產品型號	OS-190
USB 輸入	5伏特 1安培
尺寸	106 (長)x 106 (寬)x 137 (高)公厘
淨重	約451公克
毛重	約651公克